YAMAHA

PARTS CATALOGUE

AL115C (5TL2) INDONESIA

YAMAHA GENUINE Parts & Accessories

1D5TL-460E1

( )

AL115C
PARTS CATALOGUE
©2004 by Yamaha Motor Co., Ltd.
1st edition, October 2004
All rights reserved.
Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Co., Ltd.
is expressly prohibited.
Printed in Japan.

FOREWORD

This Parts Catalogue is related to the parts for the model(s) on the cover page. When you are ordering replacement parts, please refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after the issue of the Parts Catalogue will be announced in the Parts News.
   It is advisable that you make the necessary corrections to the Parts Catalogue according to the Parts News.

2. Abbreviations
   The following abbreviations are used in this Parts Catalogue.

   “UR” Use specified parts number.
   “UN” Use as many as needed.
   “AP” Alternate Parts
   “LM” Locally Made (Parts need to be ordered locally)
   “F#” Frame No. (Applicable machine No.)
   “O/S” Over Size

3. The number of components for assembly
   - Parts, which are to be supplied in an assembly, are listed with a dot (.) in front of the part name as shown below.
   - The numeral appearing to the right of each component part indicates the quantity of parts for each assembly unit.

PART NO.	DESCRIPTION	Q’TY	REMARKS
2F5–83310–60	FRONT FLASHER LIGHT ASSY	2	
115–83311–60	.BULB (6V–18W)	1	

4. Applicable colours of graphics are represented in the “REMARKS” as shown below.

PART NO.	DESCRIPTION	Q’TY	REMARKS
2N4–24110–00–X5	FUEL TANK COMP.	2	MXR
3J1–24240–10	.GRAPHIC, FUEL TANK	1	FOR MXR

5. Note that the illustrations for reference in finding parts numbers are not to be used for assembling. When assembling, please use the applicable service manual.

6. The asterisk (*) before a reference number indicates modified items after the first edition.

7. Applicable Serial No.

Frame Serial No.

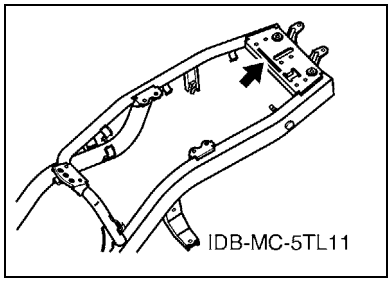

Engine Serial No.

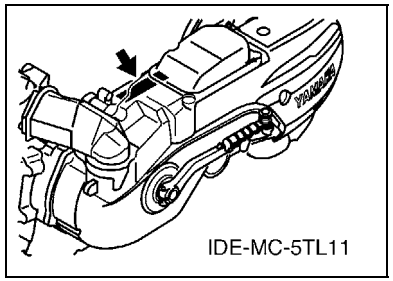

8. Applicable Colour Code (The (*) mark shows Model colour.)

Abbreviation	Colour Name	Colour Code
DPBMC(*)	DEEP PURPLISH BLUE METALLIC C	0564
SL	SILVER	0035
VRC1(*)	VIVID RED COCKTAIL 1	0121
YB(*)	YAMAHA BLACK	0033

9. Applicable Starting Serial No.

Frame Serial No.

Serial No.	Name Of Q'ty Column	Model Code

Engine Serial No.

Serial No.	Name Of Q'ty Column	Model Code

CONTENTS

ENGINE

CYLINDER 1
CRANKSHAFT & PISTON 2
VALVE 3
CAMSHAFT & CHAIN 4
OIL PUMP 5
AIR SHROUD & FAN 6
INTAKE 7
CARBURETOR 8
EXHAUST 10
CRANKCASE 11
CRANKCASE COVER 1 13
STARTER 15
CLUTCH 16
TRANSMISSION 18

CHASSIS

FRAME 19
FENDER 20
SIDE COVER 21
REAR ARM & SUSPENSION 22
STEERING 23
FUEL TANK 25
SEAT 26
FRONT WHEEL 27
FRONT BRAKE CALIPER 28
REAR WHEEL 29
STEERING HANDLE & CABLE 30
FRONT MASTER CYLINDER 32
STAND & FOOTREST 33
LEG SHIELD 34
GENERATOR 35
STARTING MOTOR 36
FLASHER LIGHT 37
METER 38
HEADLIGHT 39
TAILLIGHT 40
HANDLE SWITCH & LEVER 41
ELECTRICAL 1 42
ELECTRICAL 2 43

INDEX

NUMERICAL INDEX 44

FIG. 1 CYLINDER

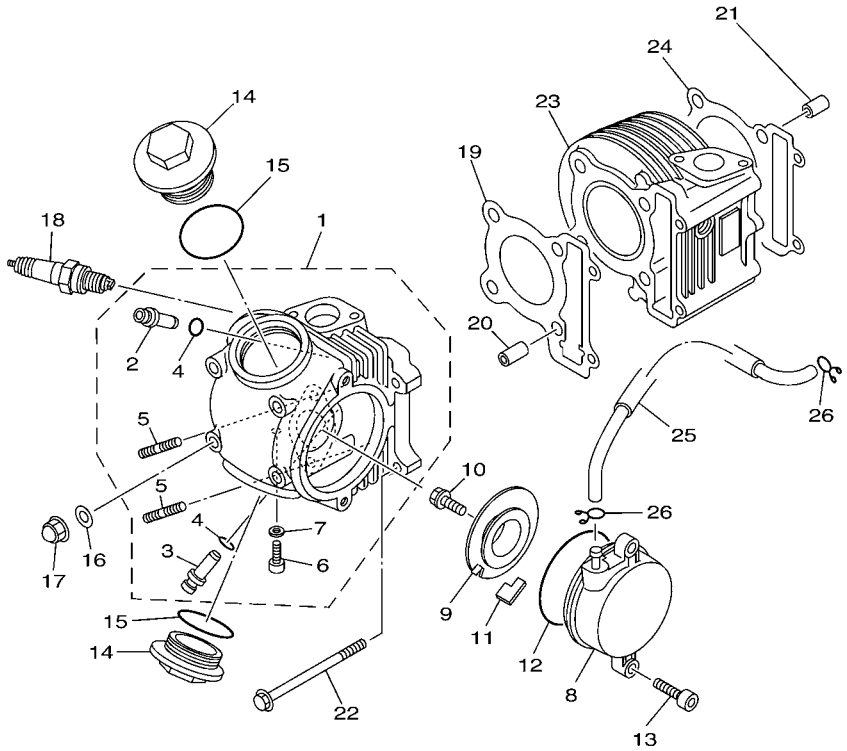

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–E1102–00	CYLINDER HEAD ASSY	1					
2	5LW–11133–10	.GUIDE, VALVE 1	1					
3	5LW–11134–10	.GUIDE, VALVE 2	1					
4	93210–09800	.O-RING	2					
5	90116–08806	.BOLT, STUD	2					
6	90153–06029	.SCREW, HEXAGON	1					
7	90430–06014	.GASKET	1					
8	5LW–E1185–00	COVER, CYLINDER HEAD SIDE 1	1					
9	5LW–E1165–00	PLATE, BREATHER	1					
10	5LW–E3185–00	BOLT, BREATHER	1					
11	5LW–E1155–00	SEAL, LABYRINTH	1					
12	93210–71462	O-RING	1					
13	91317–06020	BOLT	2					
14	4ST–E1186–00	COVER, CYLINDER HEAD SIDE 2	2					
15	93210–448G4	O-RING	2					
16	90201–08609	WASHER, PLATE	4					
17	90176–08026	NUT, CROWN	4					
18	94700–00828	PLUG SPARK (NGK C7HSA)	1					
19	5LW–E1181–00	GASKET, CYLINDER HEAD 1	1					
20	99530–10114	PIN, DOWEL	2					
21	99530–10114	PIN, DOWEL	2					
22	95027–06100	BOLT, FLANGE	2					
23	5LW–E1310–00	CYLINDER	1					
24	5MX–E1351–00	GASKET, CYLINDER	1					
25	5TL–E4987–00	HOSE	1					
26	90467–09006	CLIP	2					

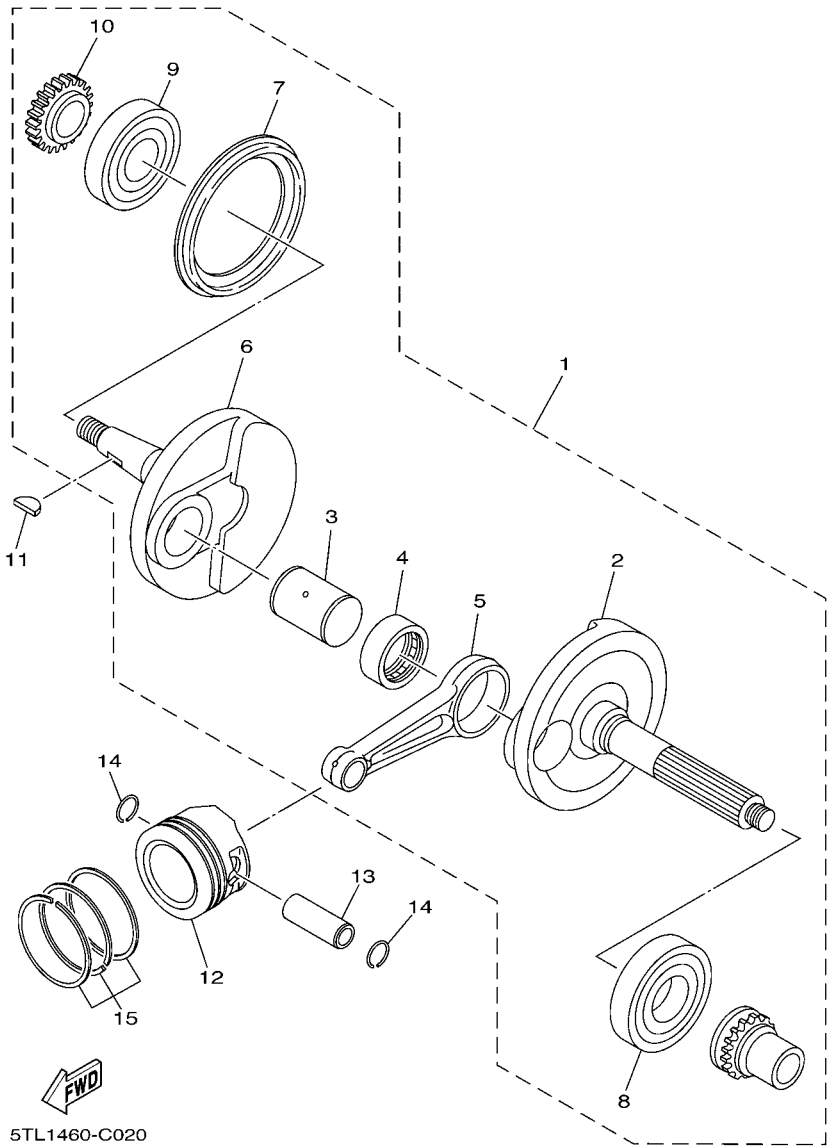

FIG. 2 CRANKSHAFT & PISTON

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–E1400–10	CRANKSHAFT ASSY	1					
2	5TL–E1412–00	.CRANK 1	1					
3	5LW–11681–00	.PIN, CRANK 1	1					
4	93310–528Y4	.BEARING	1					
5	5MX–E1651–00	.ROD, CONNECTING	1					
6	5TL–E1422–00	.CRANK 2	1					
7	5LW–E3452–00	.COVER, ROTOR FILTER	1					
8	93306–305X3	.BEARING	1					
9	93306–372Y2	.BEARING	1					
10	5LW–E3324–00	.GEAR, PUMP DRIVE	1					
11	90280–03017	KEY, WOODRUFF	1					
12	5MX–E1631–00	PISTON (STD)	1					
	5MX–E1636–00	PISTON (0.50MM O/S)	1					AP
	5MX–E1638–00	PISTON (1.00MM O/S)	1					AP
13	5MX–E1633–10	PIN, PISTON	1					
14	93450–16068	CIRCLIP	2					
15	5MX–E1603–00	PISTON RING SET (STD)	1					
	5MX–E1605–00	PISTON RING SET (0.50MM O/S)	1					AP
	5MX–E1607–00	PISTON RING SET (1.00MM O/S)	1					AP

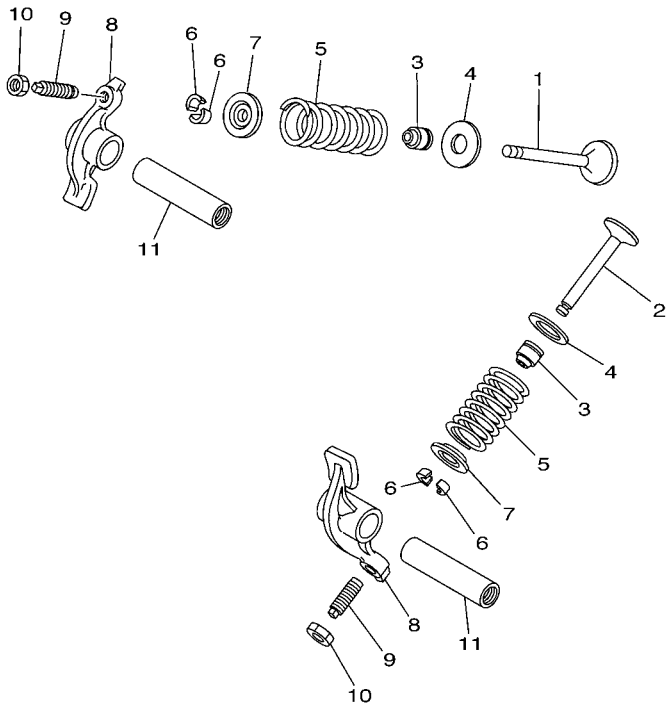

5LW1440-A031

FIG. 3 VALVE

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5LW–E2111–00	VALVE, INTAKE	1					
2	5LW–E2121–00	VALVE, EXHAUST	1					
3	5MX–E2119–00	SEAL, VALVE STEM	2					
4	5MX–E2116–00	SEAT, VALVE SPRING	2					
5	5MX–E2113–00	SPRING, VALVE INNER	2					
6	1AA–12118–00	COTTER, VALVE	4					
7	33M–12117–00	RETAINER, VALVE SPRING	2					
8	22F–12151–10	ARM, VALVE ROCKER	2					
9	22F–12159–00	SCREW, VALVE ADJUSTING	2					
10	90170–05302	NUT	2					
11	4ST–E2156–00	SHAFT, ROCKER 2	2					

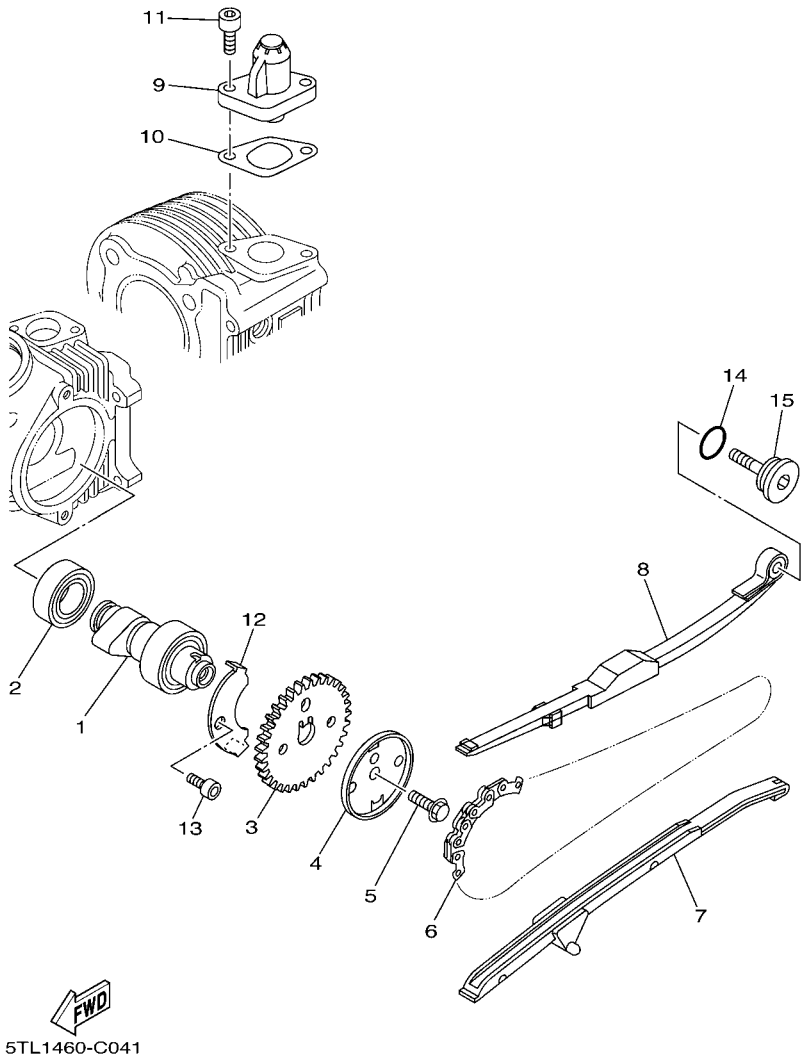

FIG. 4 CAMSHAFT & CHAIN

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5LW–E2170–01	CAMSHAFT ASSY 1	1					
2	93306–002X2	BEARING	1					
3	5MX–E2176–00	SPROCKET, CAM CHAIN	1					
4	5MX–E1145–00	PLATE, BREATHER 2	1					
5	95817–08016	BOLT, FLANGE	1					
6	94568–72090	CHAIN	1					
7	5VV–E2231–00	GUIDE, STOPPER 1	1					UR
	5LW–12231–00	GUIDE, STOPPER 1	1					UR
8	5MX–E2241–00	GUIDE, STOPPER 2	1					UR
	5LW–12241–00	GUIDE, STOPPER 2	1					UR
9	5MX–E2210–00	TENSIONER ASSY, CAM CHAIN	1					
10	5MX–E2213–00	GASKET, TENSIONER CASE	1					
11	91317–06016	BOLT	2					
12	5LW–E111F–00	PLATE	1					
13	91317–06012	BOLT	1					
14	93210–15862	O-RING	1					
15	4CW–E2157–00	BOLT	1					

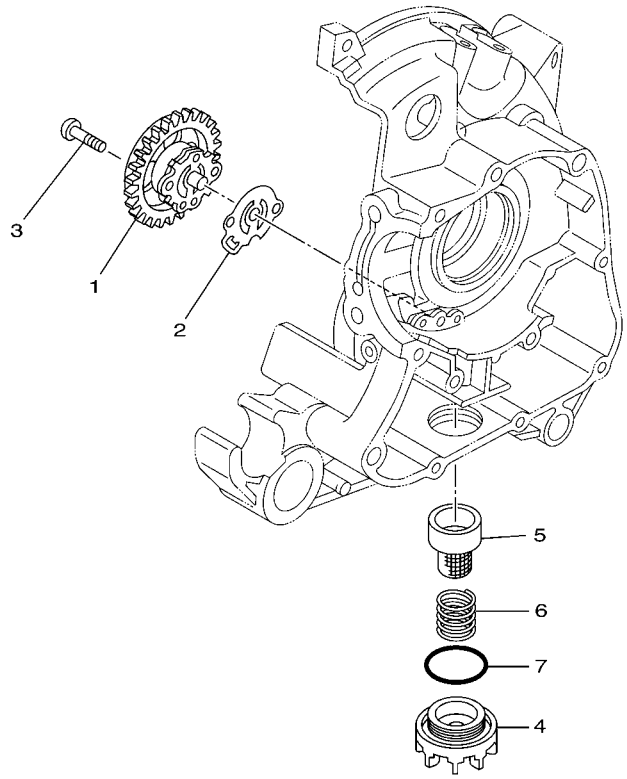

5TL1460-C050

FIG. 5 OIL PUMP

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5MX–E3300–00	OIL PUMP ASSY	1					
2	5LW–E3475–00	GASKET	1					
3	98507–05020	SCREW, PAN HEAD	2					
4	5LW–E5351–00	PLUG, DRAIN	1					
5	5LW–E3411–00	STRAINER, OIL	1					
6	90501–16004	SPRING, COMPRESSION	1					
7	93210–29800	O-RING	1					

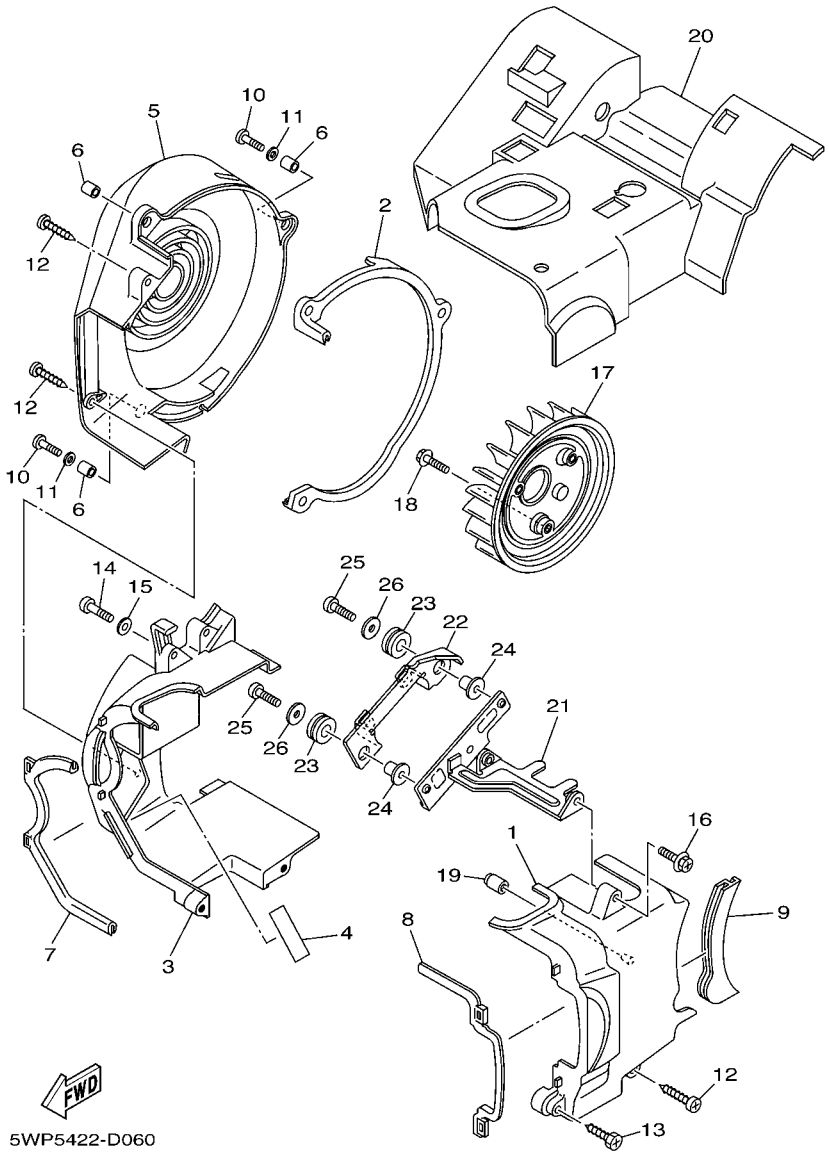

FIG. 6 AIR SHROUD & FAN

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5LW–E2651–00	AIR SHROUD, CYLINDER 1	1					
2	5LW–E2658–00	DAMPER, AIR SHROUD 1	1					
3	5LW–E2652–00	AIR SHROUD, CYLINDER 2	1					
4	5TL–E2682–00	PROTECTOR, HEAT	1					
5	5LW–E2653–00	AIR SHROUD, CYLINDER 3	1					
6	90387–067V1	COLLAR	3					
7	5LW–E2659–02	DAMPER, AIR SHROUD 2	1					
8	5LW–E2668–02	DAMPER, AIR SHROUD 3	1					
9	5TL–E2669–00	DAMPER, AIR SHROUD 4	1					
10	98507–06020	SCREW, PAN HEAD	2					
11	92907–06600	WASHER, PLATE	2					
12	97707–60530	SCREW, TAPPING	3					
13	97707–60430	SCREW, TAPPING	1					
14	98507–06025	SCREW, PAN HEAD	1					
15	92907–06600	WASHER, PLATE	1					
16	90119–06086	BOLT, WITH WASHER	1					
17	5LW–E2611–00	FAN	1					
18	95027–06012	BOLT, FLANGE	3					
19	5LW–E3569–00	PLUG, BLIND	1					
20	5TL–E2631–10	DEFLECTOR 1	1					
21	5TL–E2681–10	PLATE	1					
22	5TL–E2633–00	PLATE	1					
23	90480–14817	GROMMET	2					
24	90387–06052	COLLAR	2					
25	98507–06020	SCREW, PAN HEAD	2					
26	90201–06057	WASHER, PLATE	2					

FIG. 7 INTAKE

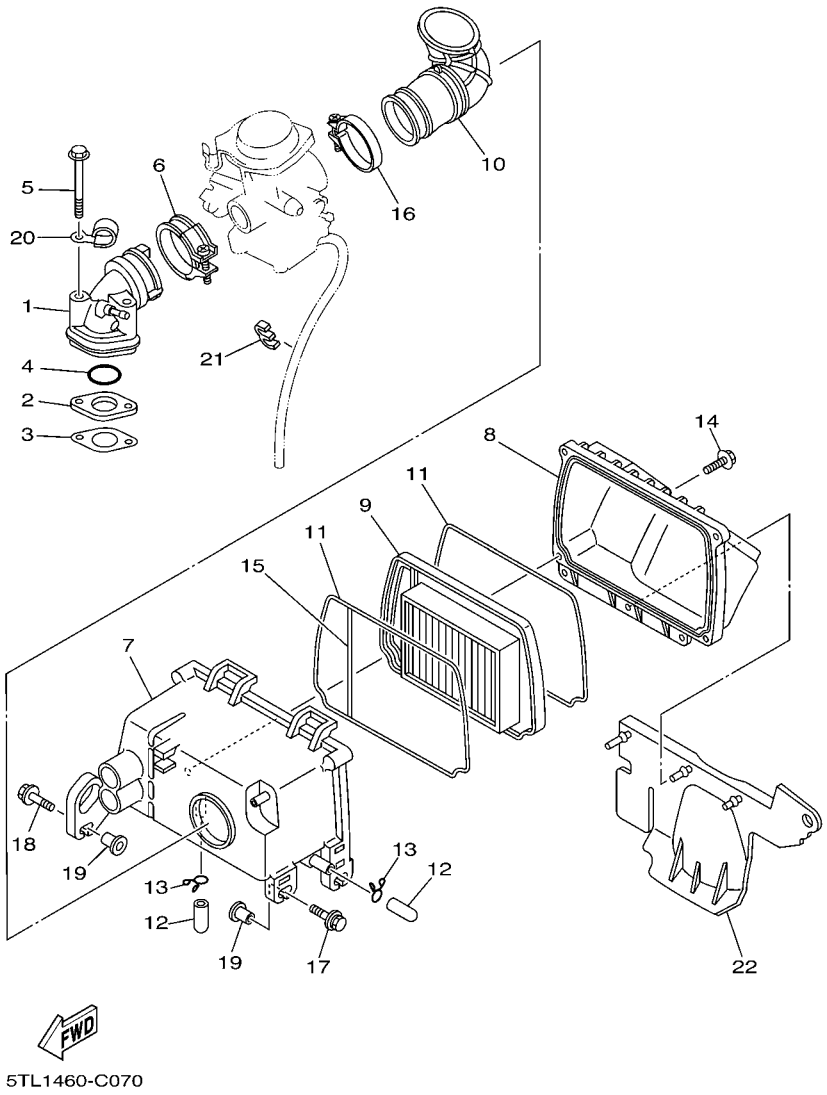

5TL1460-C070

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–E3585–00	MANIFOLD	1					
2	5MX–E3595–00	JOINT	1					
3	5MX–E3556–10	GASKET, MANIFOLD	1					
4	93210–25803	O-RING	1					
5	95817–06065	BOLT, FLANGE	2					
6	5MX–E3474–01	BAND	1					
7	5TL–E4411–00	CASE, AIR CLEANER 1	1					
8	5TL–E4412–00	CAP, CLEANER CASE 1	1					
9	5TL–E4450–00	ELEMENT ASSY, AIR CLEANER	1					
10	5TL–E4453–00	JOINT, AIR CLEANER 1	1					
11	5TL–E4452–00	SEAL	2					
12	5TL–E443E–00	PIPE, DRAIN	2					
13	90467–12800	CLIP	2					
14	90163–05803	SCREW, TAPPING	4					
15	5TL–E4462–00	SEAL	1					
16	5MX–E3575–01	BAND	1					
17	90119–06182	BOLT, WITH WASHER	2					
18	90119–06211	BOLT, WITH WASHER	1					
19	90387–06891	COLLAR	3					
20	90465–06376	CLAMP	1					
21	90464–60067	CLAMP	1					
22	5TL–F1691–00	FLAP	1					

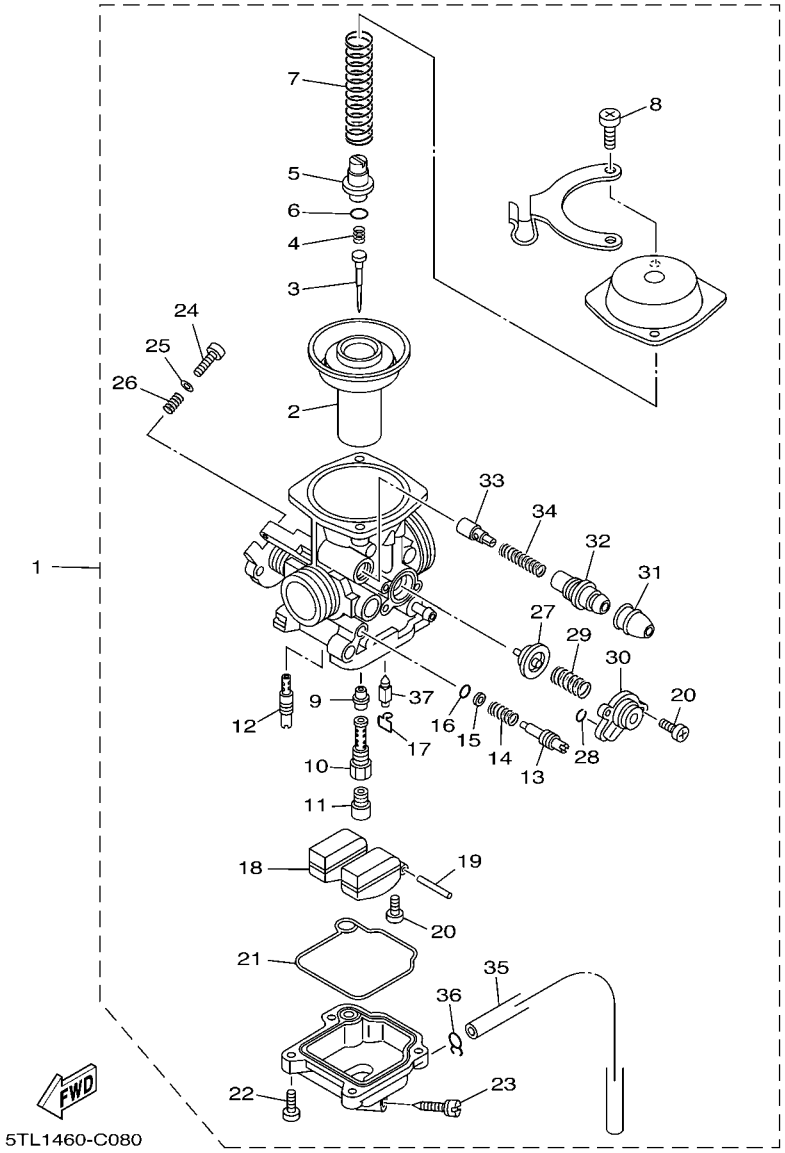

FIG. 8 CARBURETOR

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–E4901–01	CARBURETOR ASSY 1	1					
2	5TL–E4940–00	.DIAPHRAGM ASSY	1					
3	5TL–E4116–00	.NEEDLE	1					
4	5TL–E4133–00	.SPRING, THROTTLE STOP	1					
5	5TL–E4936–00	.SEAT, SPRING	1					
6	3TJ–14564–40	.O-RING	1					
7	5TL–E4933–00	.SPRING, DIAPHRAGM	1					
8	5TL–E4D25–00	.SCREW, PAN HEAD	2					
9	5TL–E4947–00	.JET, NEEDLE	1					
10	5TL–E414G–00	.PIPE, MAIN BREED	1					
11	5TL–E4943–29	.JET, MAIN (#110)	1					
12	5TL–E4948–02	.JET (#38)	1					
13	5TL–E4923–00	.SCREW, PILOT	1					
14	4JH–14160–00	.COIL, SPRING	1					
15	3TJ–14952–40	.WASHER	1					
16	3TJ–14562–40	.O-RING	1					
17	663–14159–00	.CLIP	1					
18	5TL–E4985–00	.FLOAT	1					
19	676–14548–00	.PIN, FLOAT ARM	1					
20	688–14592–00	.SCREW	3					
21	5TL–E4984–00	.GASKET, FLOAT CHAMBER	1					
22	98502–04012	.SCREW, PAN HEAD	4					
23	5TL–E4191–00	.PLUG, DRAIN	1					
24	5TL–E4922–00	.SCREW, THROTTLE	1					
25	4TV–14557–00	.WASHER	1					
26	5TL–E4531–00	.SPRING, ADJUST SCREW	1					
27	5TL–E4170–00	.DIAPHRAGM ASSY	1					

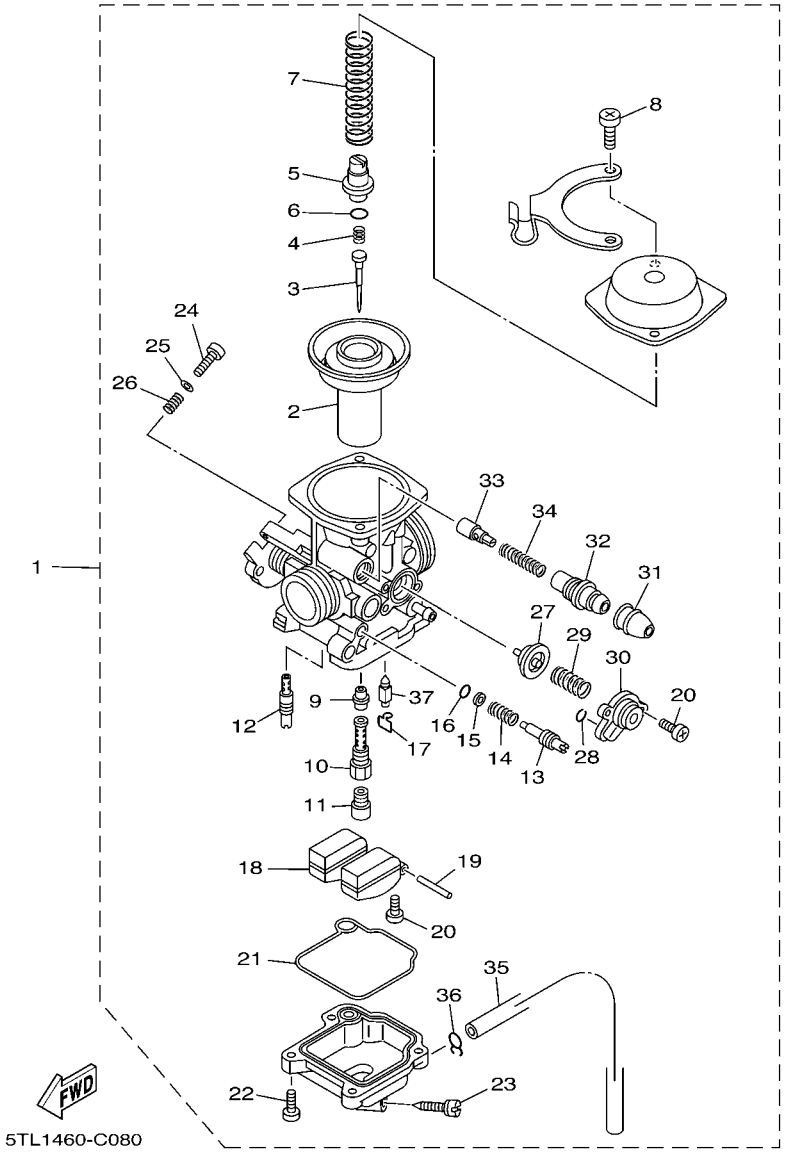

FIG. 8 CARBURETOR

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
28	3TJ–14536–40	.GASKET	1					
29	5TL–E4275–00	.SPRING	1					
30	5TL–E4280–00	.COVER, CARBURETOR	1					
31	5TL–E4173–00	.COVER, PLUNGER CAP	1					
32	5TL–E4174–00	.CAP, PLUNGER	1					
33	5TL–E4171–00	.PLUNGER, STARTER	1					
34	5TL–E4133–00	.SPRING, THROTTLE STOP	1					
35	5TL–E4196–00	.PIPE	1					
36	5BF–14919–00	.CLIP	1					
37	5TL–E4945–00	.FLOAT VALVE COMP.	1					

FIG. 9 EXHAUST

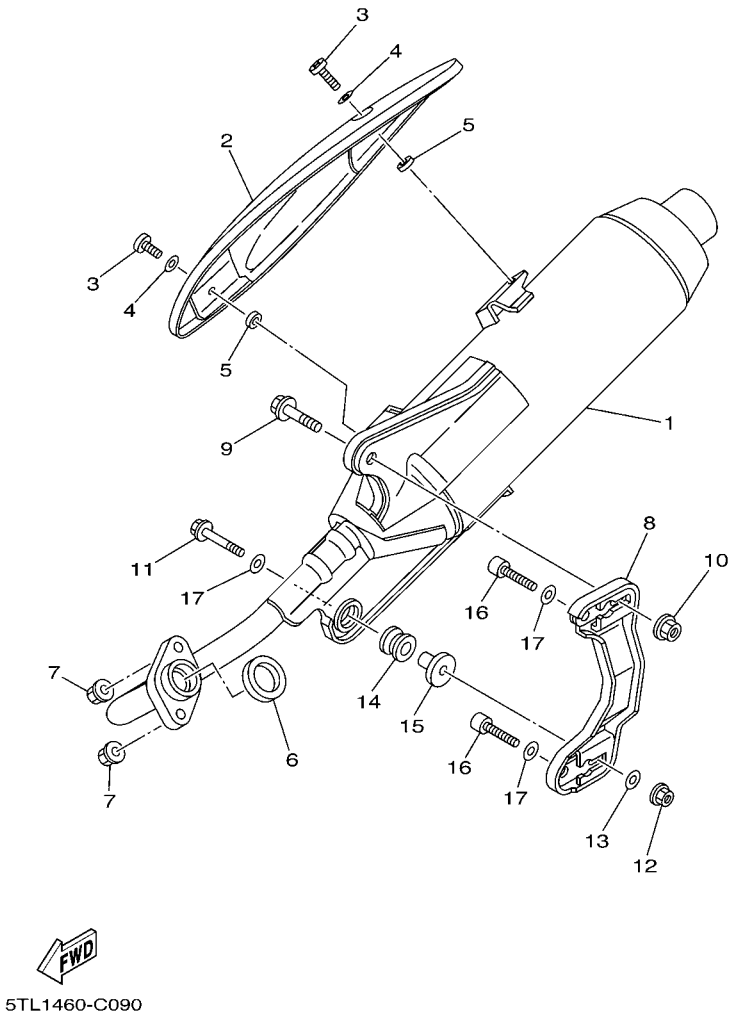

5TL1460-C090

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–E4610–00–33	EXHAUST PIPE ASSY 1	1					YB
2	5TL–E4718–00	PROTECTOR, MUFFLER 1	1					
3	98980–06012	SCREW, BIND	2					
4	92903–06200	WASHER, PLAIN	2					
5	90201–05016	WASHER, PLATE	2					
6	5MX–E4613–00	GASKET, EXHAUST PIPE	1					
7	95707–08500	NUT, FLANGE	2					
8	5TL–E4770–00	STAY, MUFFLER 1	1					
9	95817–10035	BOLT, FLANGE	1					
10	95607–10200	NUT, U FLANGE	1					
11	95817–08045	BOLT, FLANGE	1					
12	90179–08577	NUT	1					
13	90201–081R9	WASHER, PLATE	1					
14	5TL–E4747–00	DAMPER, MUFFLER	1					
15	5TL–E479M–00	COLLAR 1	1					
16	91317–08035	BOLT	2					
17	90201–086P8	WASHER, PLATE	3					

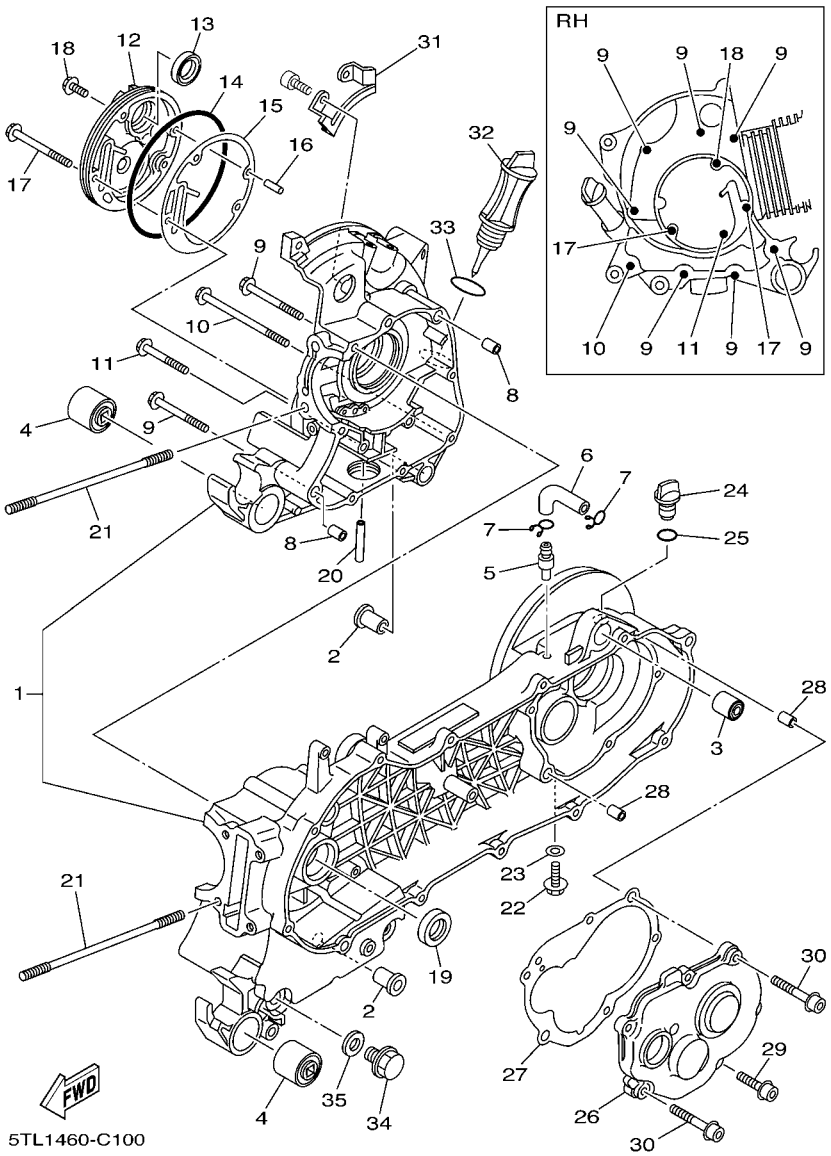

FIG. 10 CRANKCASE

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–E5150–10	CRANKCASE ASSY	1					
2	5MX–F7121–00	BUSH	2					
3	164–22216–00	BUSH, REAR SHOCK ABSORBER	1					
4	5TL–F2123–00	BUSH 1	2					
5	5TL–E5371–00	BREATHER	1					
6	5TL–E5373–00	PIPE, BREATHER	1					
7	90467–11106	CLIP	2					
8	99530–10114	PIN, DOWEL	2					
9	95027–06060	BOLT, FLANGE	7					
10	95027–06100	BOLT, FLANGE	1					
11	95027–06050	BOLT, FLANGE	1					
12	5LW–E5417–00	COVER, CAP	1					
13	93102–19800	OIL SEAL	1					
14	93211–07800	O-RING	1					
15	5MX–E5453–00	GASKET	1					
16	99480–05010	PIN	1					
17	95027–06070	BOLT, FLANGE	2					
18	95027–06016	BOLT, FLANGE	1					
19	93102–22810	OIL SEAL	1					
20	5LW–E3416–00	PIPE, OIL 1	1					
21	5MX–E1391–00	BOLT, STUD 1	4					
22	95817–08016	BOLT, FLANGE	1					
23	90430–08119	GASKET	1					
24	5LW–E5363–00	PLUG, OIL	1					
25	93210–148H8	O-RING	1					
26	5LW–E5421–00	COVER, CRANKCASE 2	1					
27	5LW–E5461–00	GASKET, CRANKCASE COVER 2	1					

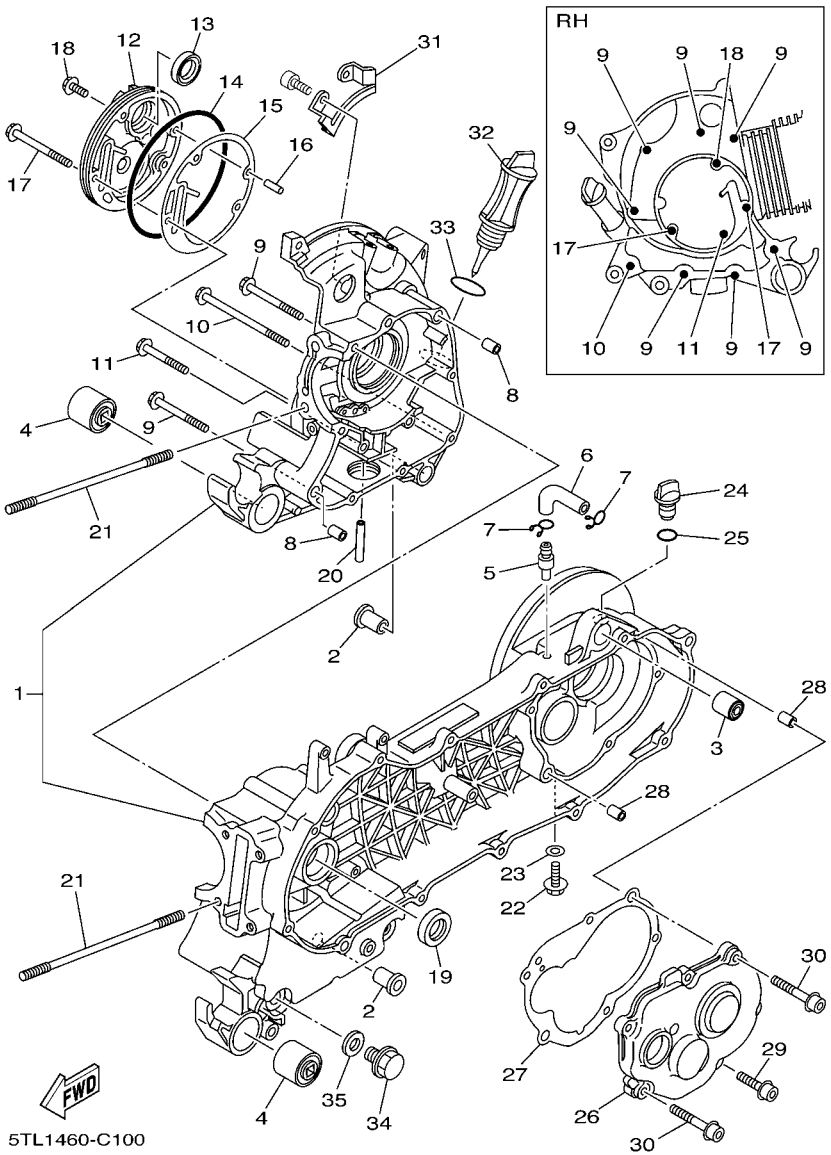

FIG. 10 CRANKCASE

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
28	99530–10114	PIN, DOWEL	2					
29	90109–067E4	BOLT	4					
30	90110–06813	BOLT, HEXAGON SOCKET HEAD	2					
31	5LW–E5113–00	PLATE	1					
32	5TL–E5362–00	PLUG, OIL LEVEL	1					
33	5LW–E3769–00	O-RING	1					
34	90340–12808	PLUG, STRAIGHT SCREW	1					
35	90201–12172	WASHER, PLATE	1					

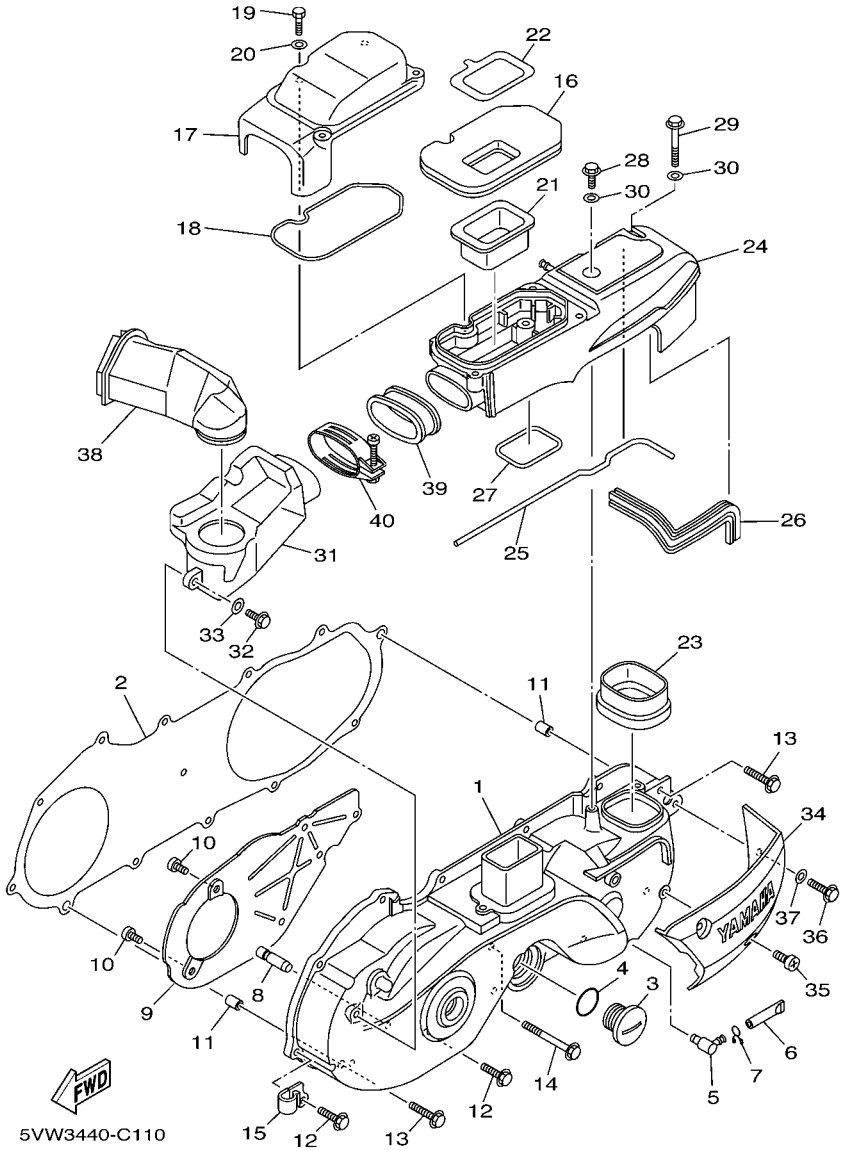

FIG. 11 CRANKCASE COVER 1

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–E5411–00–33	COVER, CRANKCASE 1	1					YB
2	5MX–E5451–00	GASKET, CRANKCASE COVER 1	1					
3	90340–32805	PLUG, STRAIGHT SCREW	1					
4	93210–328G3	O-RING	1					
5	5LW–E5371–01	BREATHER	1					
6	4ST–E443E–00	PIPE, DRAIN	1					
7	90467–11106	CLIP	1					
8	5LW–15659–01	SHAFT	1					
9	5TL–E5191–00	PLATE	1					
10	98907–06010	SCREW, BIND	6					
11	99530–10114	PIN, DOWEL	2					
12	95027–06025	BOLT, FLANGE	10					
13	95027–06035	BOLT, FLANGE	2					
14	95027–06060	BOLT, FLANGE	1					
15	90462–10802	CLAMP	1					
16	5TL–E5407–00	ELEMENT 1	1					
17	5TL–E5333–00	COVER	1					
18	5TL–E5472–00	SEAL, AIR DUCT	1					
19	97007–05020	BOLT	4					
20	92907–05600	WASHER, PLATE	4					
21	5TL–E5404–00	GUIDE, ELEMENT	1					
22	5TL–E5497–00	PLATE, DUST SEAL	1					
23	5TL–E5475–00	DUCT, AIR	1					
24	5TL–E5492–00	COVER	1					
25	5TL–E5315–00	SEAL, CRANKCASE	1					
26	5TL–E5379–00	SEAL, CRANKCASE	1					
27	5TL–E5494–00	SEAL, PROTECTOR	1					

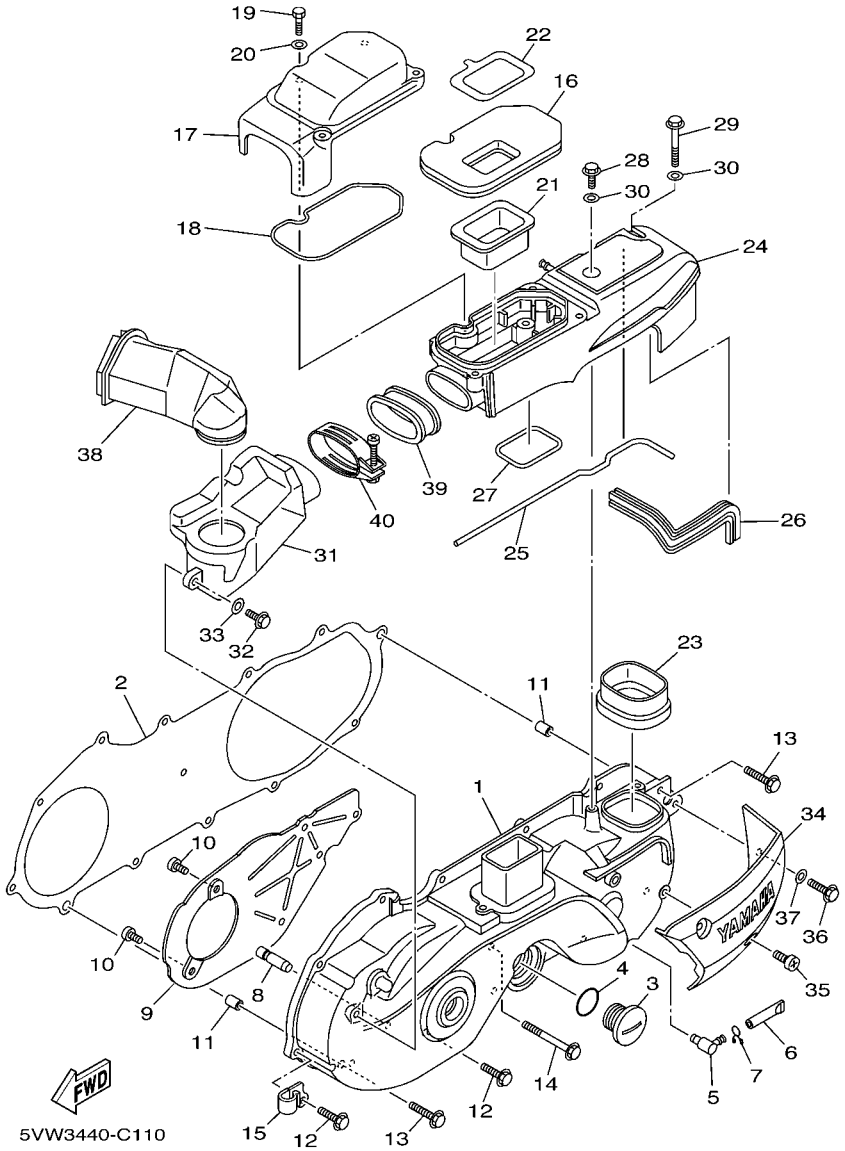

FIG. 11 CRANKCASE COVER 1

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
28	95027–06016	BOLT, FLANGE	3					
29	95027–06050	BOLT, FLANGE	1					
30	92907–06200	WASHER	4					
31	5TL–E5471–00	DUCT, AIR	1					
32	95027–06016	BOLT, FLANGE	1					
33	92907–06200	WASHER	1					
34	5TL–E5413–00	COVER	1					
35	98907–06012	SCREW, BIND	2					
36	95027–06016	BOLT, FLANGE	1					
37	92907–06200	WASHER	1					
38	5TL–E5473–00	DUCT, AIR	1					
39	5TL–E5474–00	SEAL, AIR DUCT	1					
40	5TL–E5484–00	CLAMP 2	1					

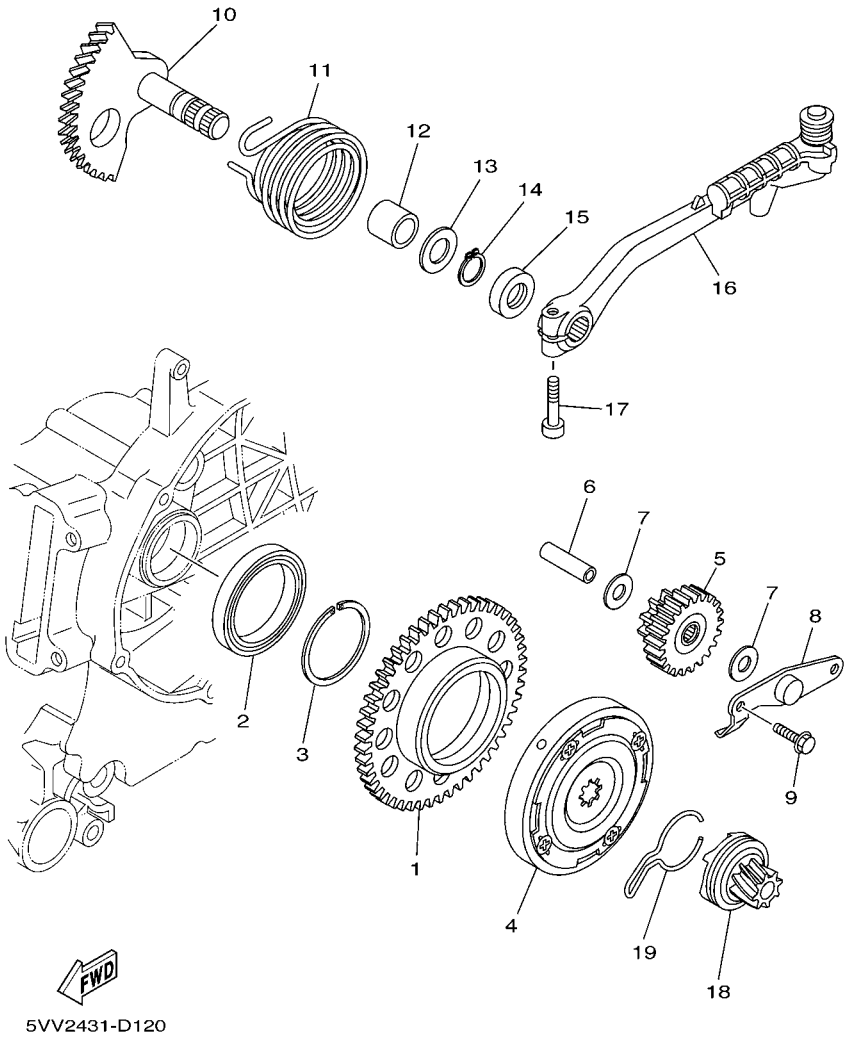

5VV2431-D120

FIG. 12 STARTER

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–E5524–00	WHEEL, STARTER	1					
2	93306–809Y0	BEARING	1					
3	93440–45827	CIRCLIP	1					
4	5VV–E5570–00	STARTER CLUTCH ASSY	1					
5	5TL–E5650–00	IDLE GEAR ASSY	1					
6	5MX–E5521–00	SHAFT 1	1					
7	90201–10018	WASHER, PLATE	2					
8	5LW–E5532–00	PLATE, IDLE GEAR	1					
9	95027–06012	BOLT, FLANGE	2					
10	5TL–E5601–10	KICK SHAFT ASSY	1					
11	90508–32768	SPRING, TORSION	1					
12	90380–15800	BUSH, SOLID	1					
13	90201–154E8	WASHER, PLATE (T=1.0)	1					
14	99009–15400	CIRCLIP	1					
15	93102–15801	OIL SEAL	1					
16	5TL–E5620–00	KICK CRANK ASSY	1					
17	91317–06025	BOLT	1					
18	4VP–E5630–00	KICK PINION ASSY	1					
19	5MX–E5673–00	CLIP	1					

FIG. 13 CLUTCH

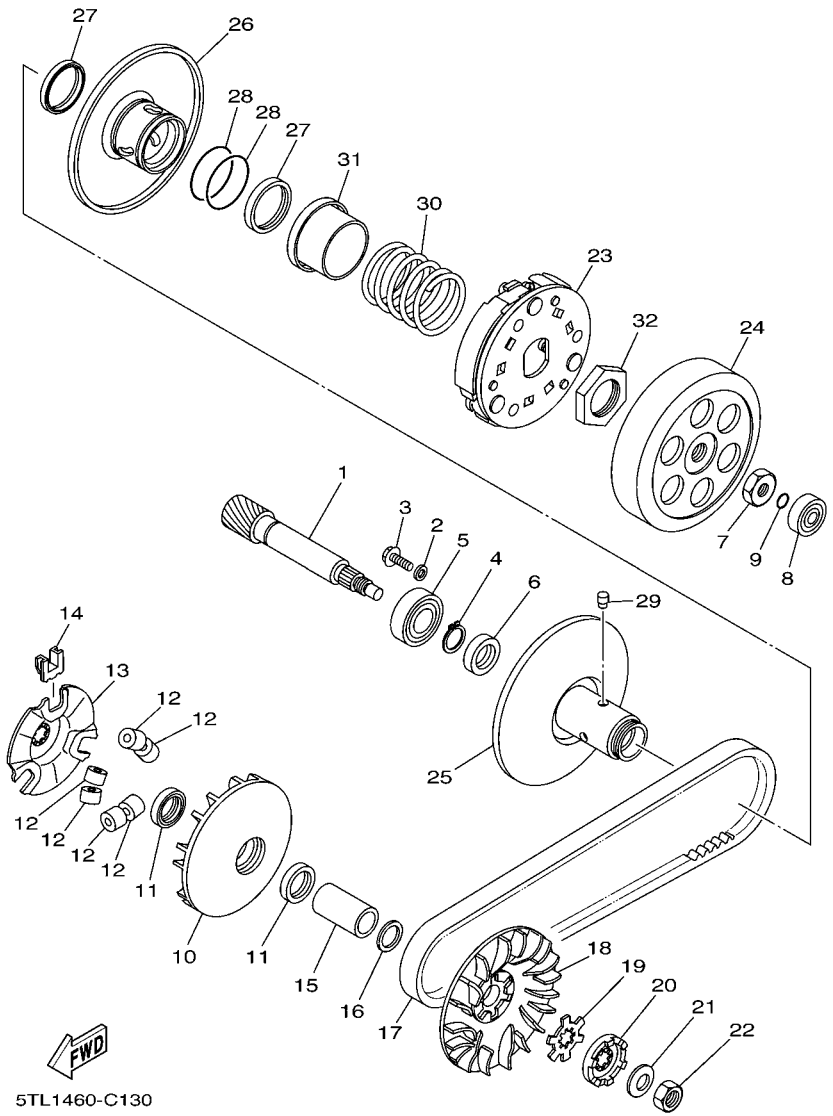

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5LW–E6111–00	GEAR, PRIMARY DRIVE	1					
2	90201–06060	WASHER, PLATE	1					
3	95027–06010	BOLT, FLANGE	1					
4	99009–17400	CIRCLIP	1					
5	93306–203YY	BEARING	1					
6	93102–17803	OIL SEAL	1					
7	90170–10317	NUT	1					
8	93300–638Y6	BEARING	1					
9	93210–06800	O-RING	1					
10	5LW–E7620–00	PRIMARY SLIDING SHEAVE COMP.	1					
11	93101–21803	OIL SEAL	2					
12	5LW–17632–00	WEIGHT	6					
13	5TL–E7623–00	CAM	1					
14	5LW–17653–00	SLIDER	3					
15	90387–16009	COLLAR	1					
16	90201–16008	WASHER, PLATE	1					
17	5TL–E7641–01	V-BELT	1					
18	5TL–E7611–00	SHEAVE, PRIMARY FIXED	1					
19	90214–14002	WASHER, CLAW	1					
20	5MX–E5657–00	CLUTCH, ONEWAY	1					
21	90208–12050	WASHER, CONICAL SPRING	1					
22	95307–12700	NUT	1					
23	5TL–E6620–01	CLUTCH CARRIER ASSY	1					
24	5TL–E6611–02	CLUTCH HOUSING COMP.	1					
25	5TL–E7660–00	SECONDARY FIXED SHEAVE COMP.	1					
26	5TL–E7670–00	SECONDARY SLIDING SHEAVE	1					
27	5TL–E7465–00	SEAL, FELT	2					

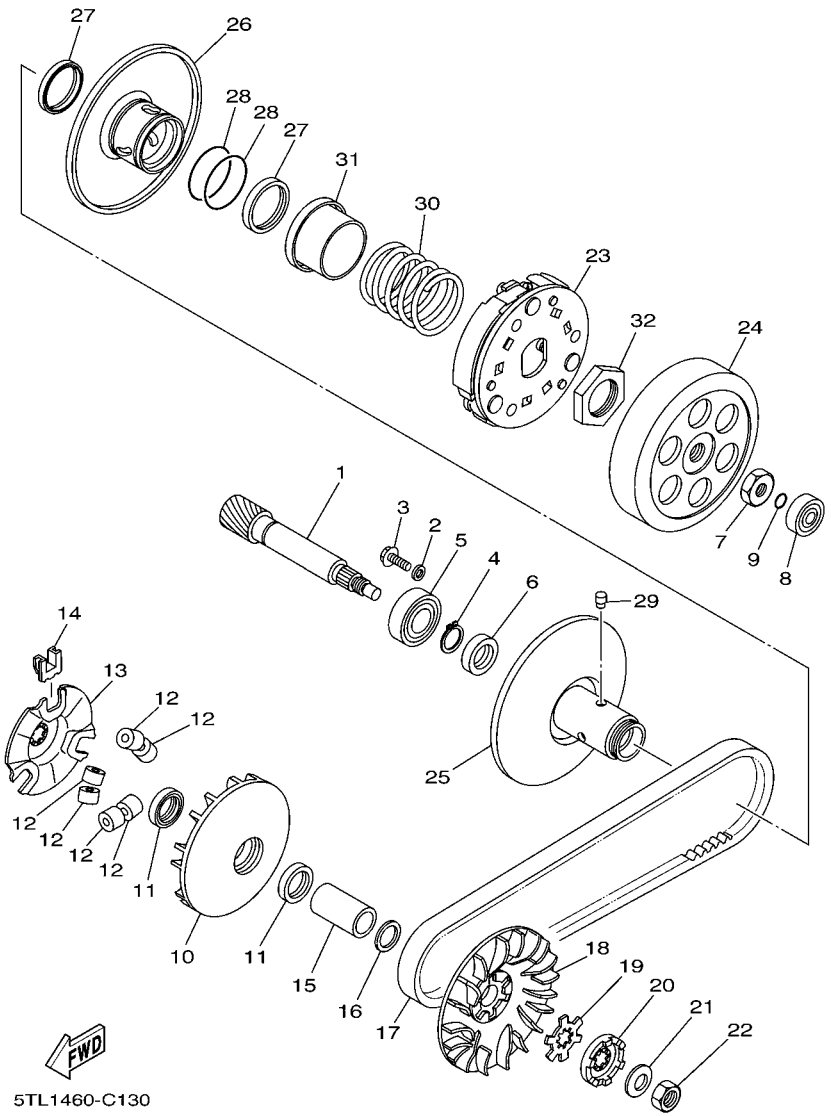

FIG. 13 CLUTCH

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
28	5TL–E7465–10	SEAL, FELT	2					
29	5TL–E7664–00	PIN, GUIDE	3					
30	5TL–E7683–00	SPRING, SECONDARY	1					
31	5TL–E7684–00	SEAT, SECONDARY SPRING	1					
32	5TL–E7668–00	NUT	1					

FIG. 14 TRANSMISSION

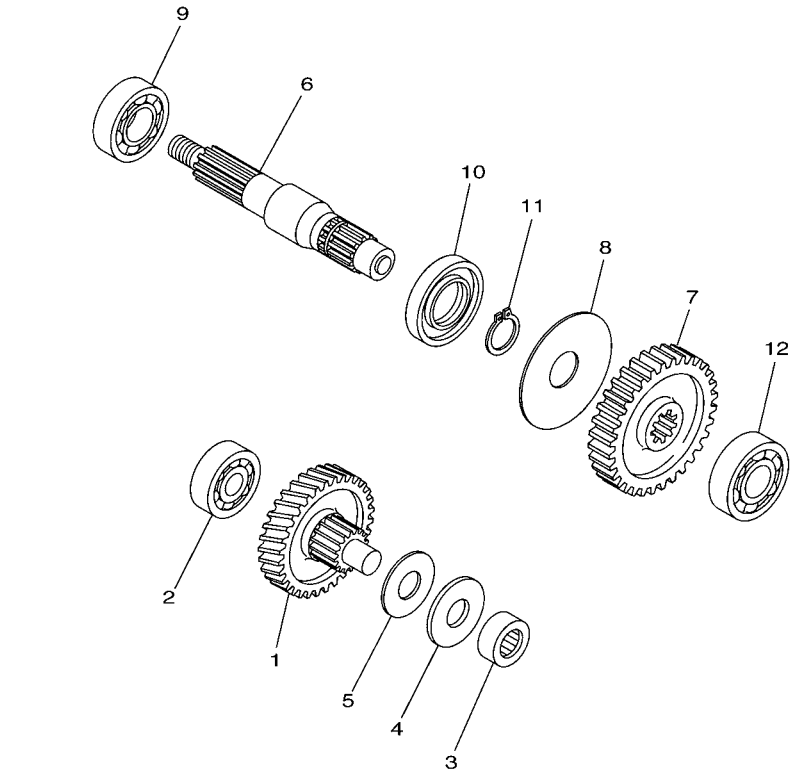

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–E7410–00	MAIN AXLE COMP. (13T/47T)	1					
2	93306–301YS	BEARING	1					
3	93311–315Y6	BEARING	1					
4	90201–15008	WASHER, PLATE	1					
5	90201–15016	WASHER, PLATE	1					
6	5TL–E7421–10	AXLE, DRIVE	1					
7	5TL–E7211–00	GEAR, 1ST WHEEL (43T)	1					
8	90208–21002	WASHER, CONICAL SPRING	1					
9	93306–004XD	BEARING	1					
10	93102–26800	OIL SEAL	1					
11	93410–20070	CIRCLIP	1					
12	93306–203YY	BEARING	1					

FIG. 15 FRAME

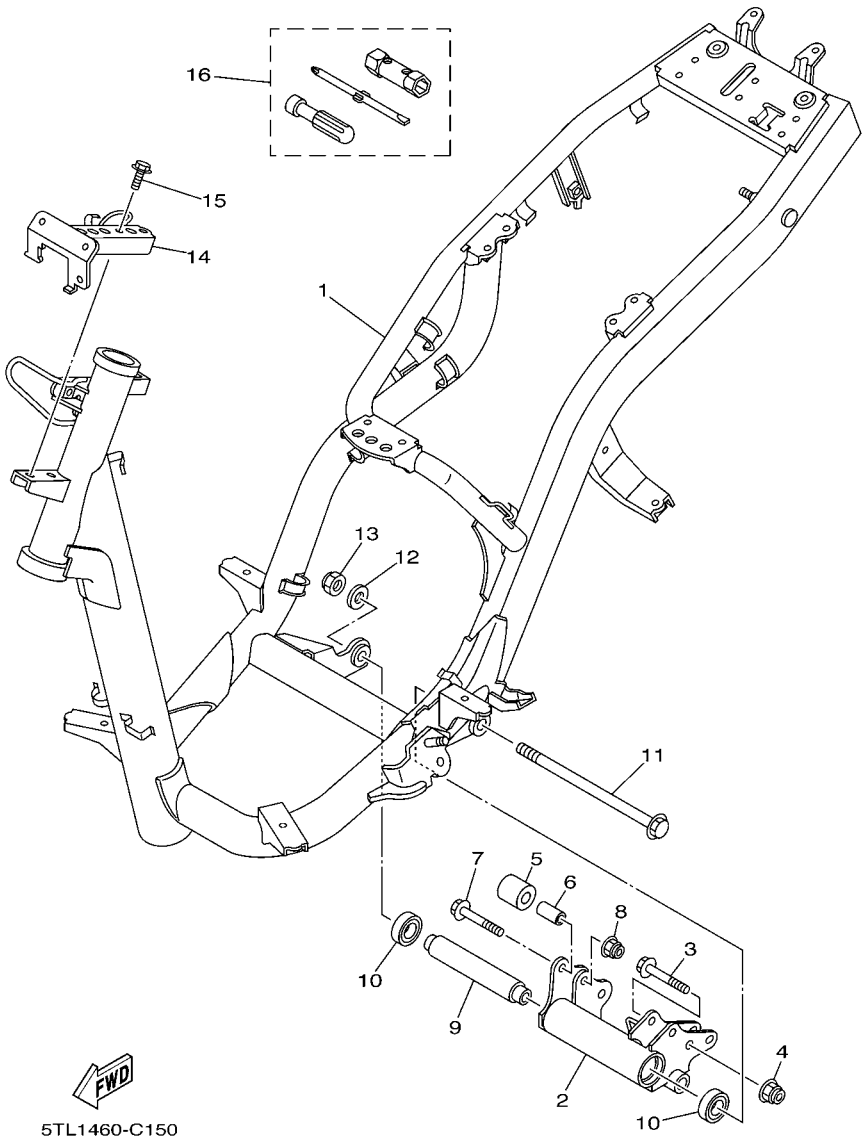

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–F1110–00–33	FRAME COMP.	1					YB
2	5TL–F1410–00	ENGINE BRACKET COMP.	1					
3	90105–10066	BOLT, FLANGE	2					
4	9560L–10200	NUT, SELF-LOCKING	2					
5	5MX–F7114–00	STOPPER, MAIN STAND	2					
6	90387–08754	COLLAR	2					
7	90105–08048	BOLT, FLANGE	2					
8	95607–08200	NUT, SELF-LOCKING	2					
9	5TL–F1459–00	SPACER	1					
10	93306–003X7	BEARING	2					
11	5TL–F5181–00	AXLE, WHEEL	1					
12	90201–12688	WASHER, PLATE	1					
13	90185–12061	NUT, SELF-LOCKING	1					
14	5TL–F8356–00	STAY 1	1					
15	95807–06010	BOLT, FLANGE	2					
16	5TL–F8100–00	TOOL KIT	1					

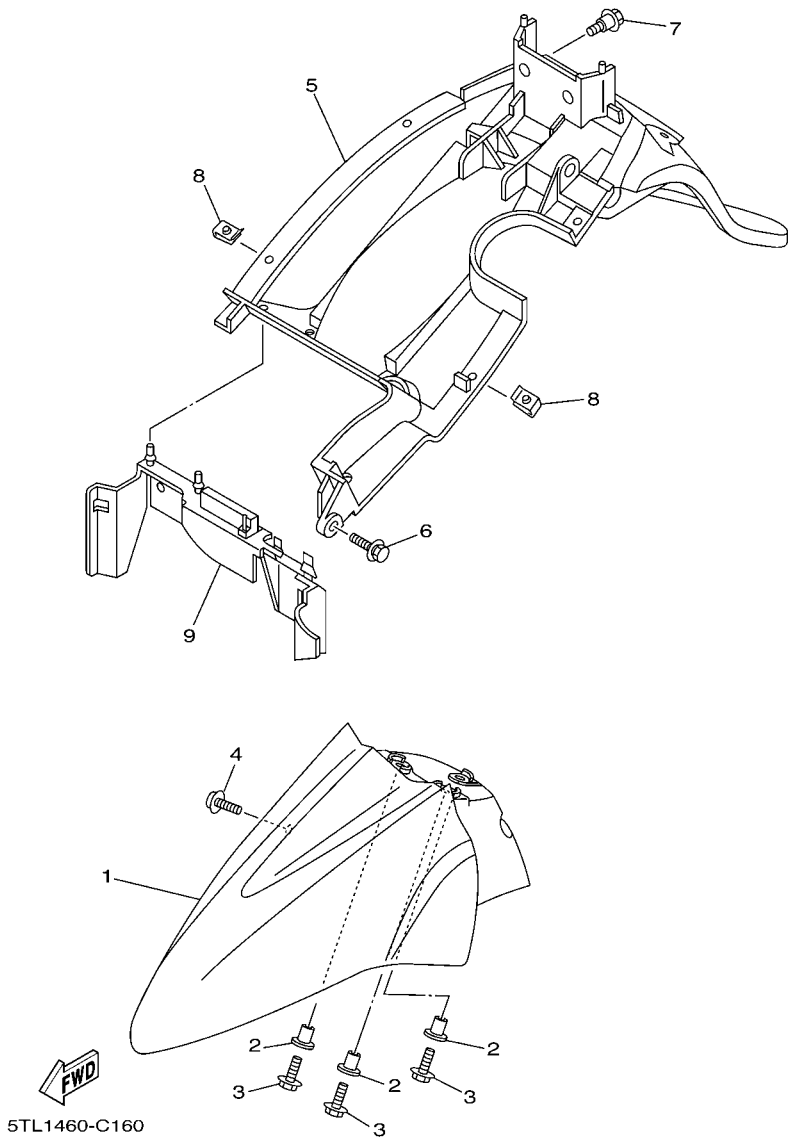

FIG. 16 FENDER

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–F1511–00–P0	FENDER, FRONT	1					UR VRC1
	5TL–F1511–00–33	FENDER, FRONT	1					UR YB
	5TL–F1511–00–P1	FENDER, FRONT	1					UR DPBMC
2	90387–07717	COLLAR	3					
3	95807–06014	BOLT, FLANGE	3					
4	90159–06817	SCREW, WITH WASHER	1					
5	5TL–F1611–00	FENDER, REAR	1					
6	90119–06044	BOLT, WITH WASHER	1					
7	90109–063F1	BOLT	2					
8	90183–05807	NUT, SPRING	4					
9	5TL–F1621–00	FLAP	1					

FIG. 17 SIDE COVER

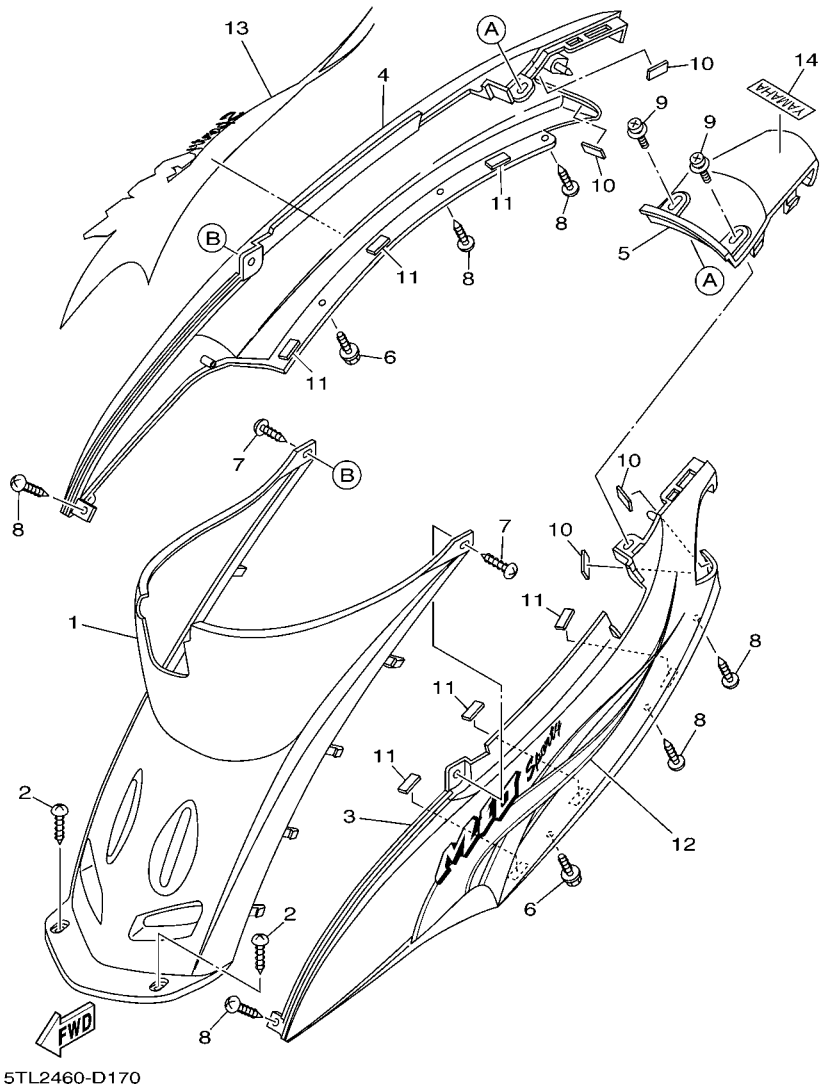

5TL2460-D170

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–F1711–00	COVER, SIDE 1	1					
2	97707–50012	SCREW, TAPPING	2					
3	5TL–F1721–00–P0	COVER, SIDE 2	1					UR VRC1
	5TL–F1721–00–33	COVER, SIDE 2	1					UR YB
	5TL–F1721–00–P1	COVER, SIDE 2	1					UR DPBMC
4	5TL–F1731–00–P0	COVER, SIDE 3	1					UR VRC1
	5TL–F1731–00–33	COVER, SIDE 3	1					UR YB
	5TL–F1731–00–P1	COVER, SIDE 3	1					UR DPBMC
5	5TL–F1741–00–P0	COVER, SIDE 4	1					UR VRC1
	5TL–F1741–00–33	COVER, SIDE 4	1					UR YB
	5TL–F1741–00–P1	COVER, SIDE 4	1					UR DPBMC
6	90163–05801	SCREW, TAPPING	2					
7	97707–50016	SCREW, TAPPING	2					
8	97707–50012	SCREW, TAPPING	6					
9	90159–06067	SCREW, WITH WASHER	2					
10	5TL–F1746–00	DAMPER	4					
11	5LM–F8371–00	DAMPER	6					
12	5TL–F173E–40	GRAPHIC 1	1					UR FOR VRC1
	5TL–F173E–50	GRAPHIC 1	1					UR FOR YB
	5TL–F173E–60	GRAPHIC 1	1					UR FOR DPBMC
13	5TL–F173F–40	GRAPHIC 2	1					UR FOR VRC1
	5TL–F173F–50	GRAPHIC 2	1					UR FOR YB
	5TL–F173F–60	GRAPHIC 2	1					UR FOR DPBMC
14	5MX–F153E–30	EMBLEM, YAMAHA	1					

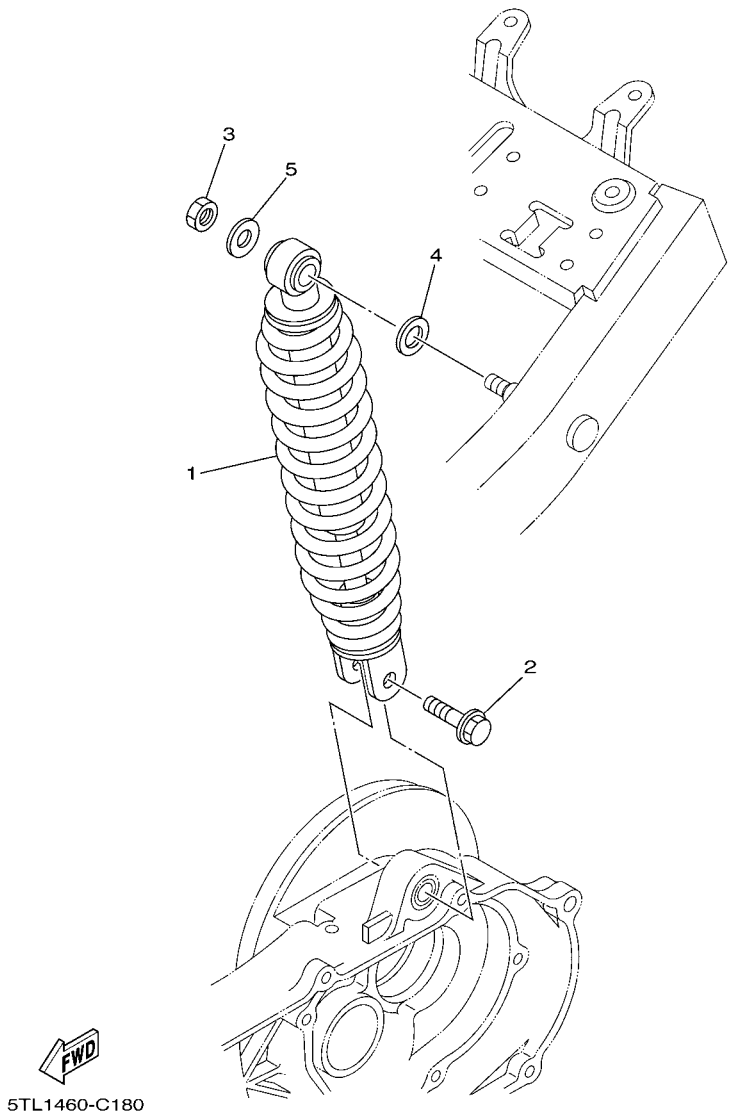

5TL1460-C180

FIG. 18 REAR ARM & SUPPLY

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–F2210–00	SHOCK ABSORBER ASSY, REAR	1					
2	90105–08121	BOLT, FLANGE	1					
3	95307–10600	NUT	1					
4	90201–12190	WASHER, PLATE	1					
5	90201–106F2	WASHER, PLATE	1					

FIG. 19 STEERING

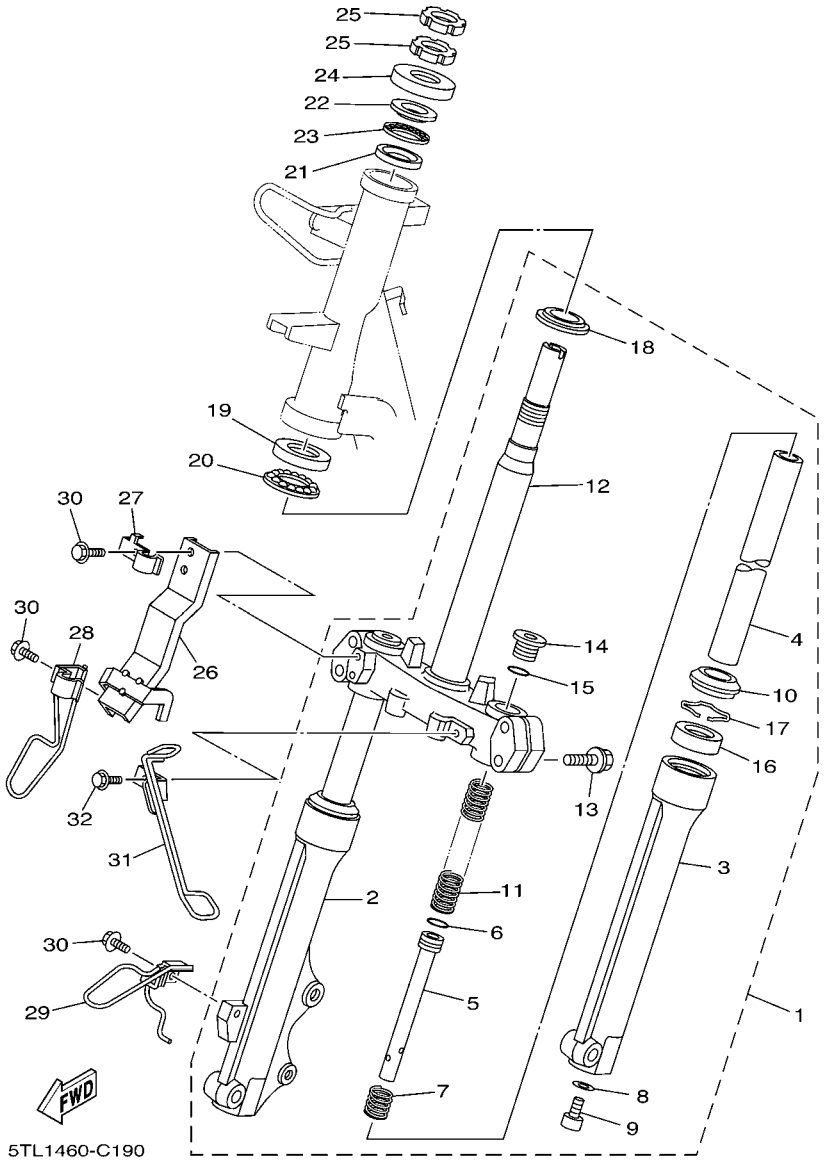

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–F3100–00	FRONT FORK ASSY	1					
2	5TL–F3136–00	.TUBE, OUTER (RIGHT)	1					
3	5TL–F3126–00	.TUBE, OUTER (LEFT)	1					
4	5TL–F3110–00	.INNER TUBE COMP.1	2					
5	5MX–F3170–00	.CYLINDER COMP., FRONT FORK	2					
6	2JG–F3157–00	.RING, PISTON	2					
7	5LM–F3152–00	.SPRING, SUB	2					
8	509–F3158–L0	.GASKET	2					
9	278–F3181–50	.BOLT, HEXAGON SOCKET HEAD	2					
10	5LM–F3144–00	.SEAL, DUST	2					
11	5TL–F3141–00	.SPRING, FRONT FORK	2					
12	5TL–F3340–00	.UNDER BRACKET COMP.	1					
13	5TL–F3346–00	.BOLT 1	4					
14	5TL–F3111–00	.BOLT, CAP	2					
15	2JG–F3147–00	.O-RING	2					
16	3AY–F3145–00	.OIL SEAL	2					
17	1T8–F3156–00	.CLIP, OIL SEAL	2					
18	156–23411–00	.RACE, BALL 1	1					
19	156–23412–00	RACE, BALL 2	1					
20	5TL–2341E–00	RETAINER, BALL BEARING	1					
21	22F–23412–01	RACE, BALL 2	1					
22	22F–23411–01	RACE, BALL 1	1					
23	5TL–2341E–10	RETAINER, BALL BEARING	1					
24	5TL–F3416–00	COVER, BALL RACE 2	1					
25	90179–25033	NUT	2					
26	5TL–F334G–00	BRACKET 1	1					
27	5TL–F5875–00	HOLDER, BRAKE HOSE 1	1					

FIG. 19 STEERING

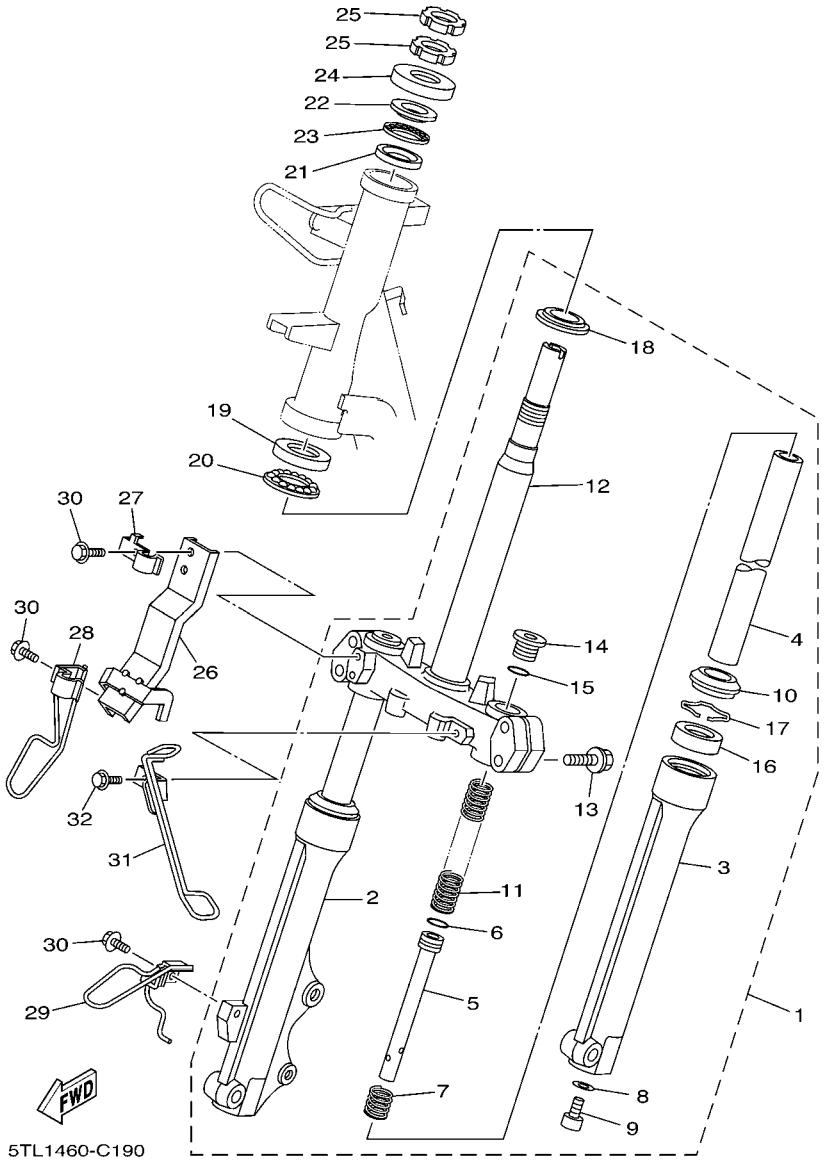

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
28	5TL–F5876–00	HOLDER, BRAKE HOSE 2	1					
29	5TL–F5887–00	HOLDER, BRAKE HOSE	1					
30	95807–06012	BOLT, FLANGE	4					
31	5TL–F1161–00	HOLDER, CABLE	1					
32	95807–06012	BOLT, FLANGE	1					

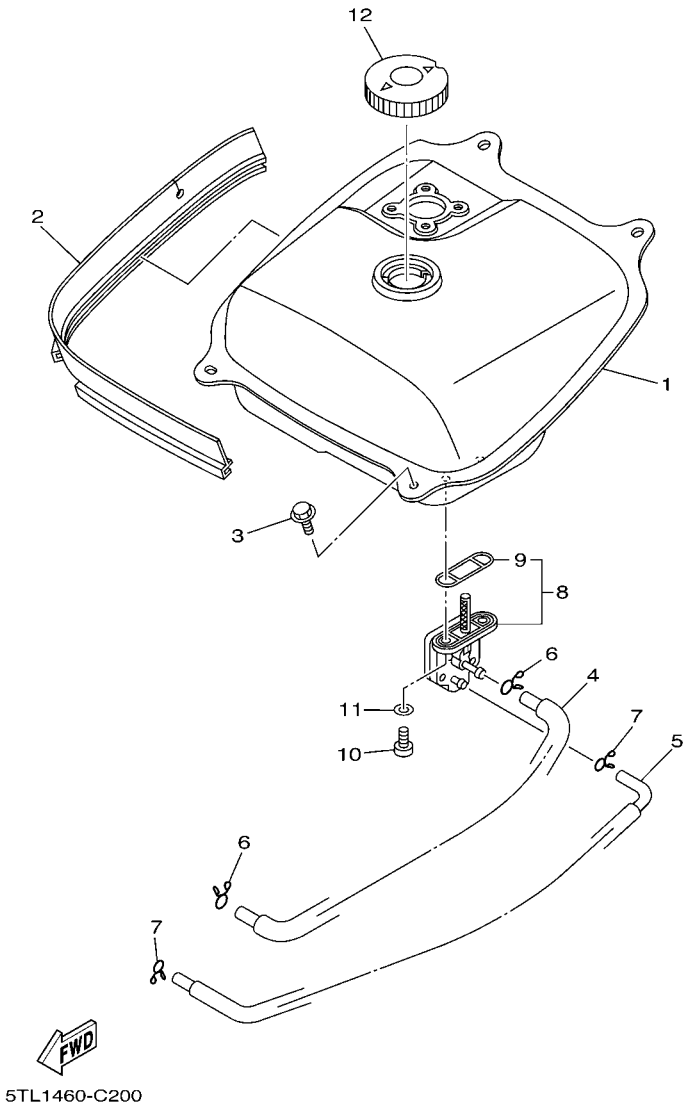

5TL1460-C200

FIG. 20 FUEL TANK

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–F4110–00–33	FUEL TANK COMP.	1					YB
2	5TL–F4188–00	MOLD, FUEL TANK	1					
3	95807–06012	BOLT, FLANGE	2					
4	5TL–F4311–00	PIPE, FUEL 1	1					
5	5TL–F4312–00	PIPE 2	1					
6	90467–09006	CLIP	2					
7	90467–08075	CLIP	2					
8	4TT–F4500–00	FUEL COCK ASSY 1	1					
9	4X8–24512–00	.O-RING	1					
10	90149–06011	SCREW	2					
11	90202–05193	WASHER, PLATE	2					
12	4YY–F4610–00	CAP ASSY	1					

FIG. 21 SEAT

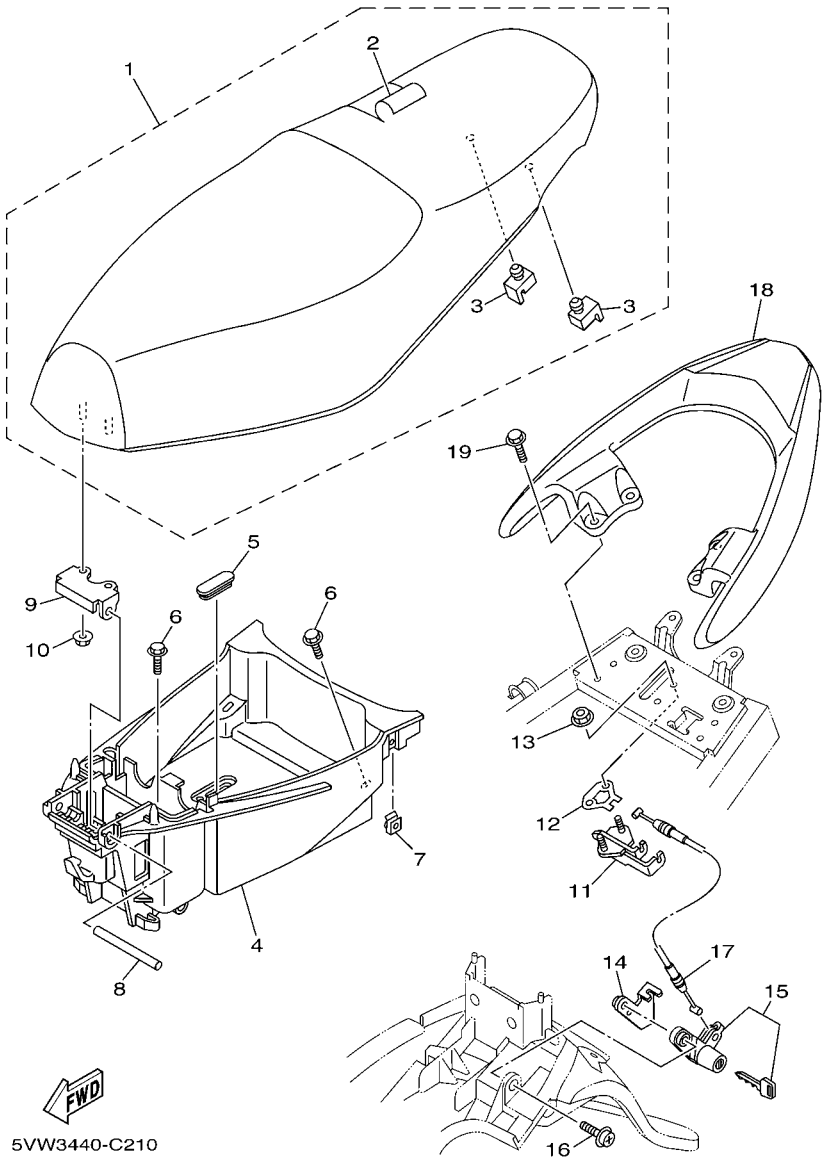

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–F4730–00	DOUBLE SEAT ASSY	1					
2	5TL–F470F–00	.SEAT COVER COMP.	1					
3	5TL–F4741–00	.PAD, SEAT	2					
4	5TL–F473R–00	BOX 1	1					
5	5TL–F6199–00	PLUG, BLIND	1					
6	90119–06044	BOLT, WITH WASHER	4					
7	90183–05807	NUT, SPRING	2					
8	5TL–F4727–00	PIN, SEAT FITTING	1					
9	5TL–F4726–00	HINGE, SEAT	1					
10	95707–06500	NUT, FLANGE	2					
11	5TL–F4705–00	SEAT LOCK ASSY	1					
12	5TL–F4792–00	PLATE	1					
13	95707–06500	NUT, FLANGE	2					
14	5TL–F117K–01	STAY, LOCK	1					
15	5TL–F4799–00	ROTOR ASSY	1					
16	90159–06033	SCREW, WITH WASHER	1					
17	5TL–F478E–00	CABLE, SEAT LOCK	1					
18	5TL–F4773–10–35	HANDLE, SEAT	1					SL
19	95827–06020	BOLT, FLANGE	4					

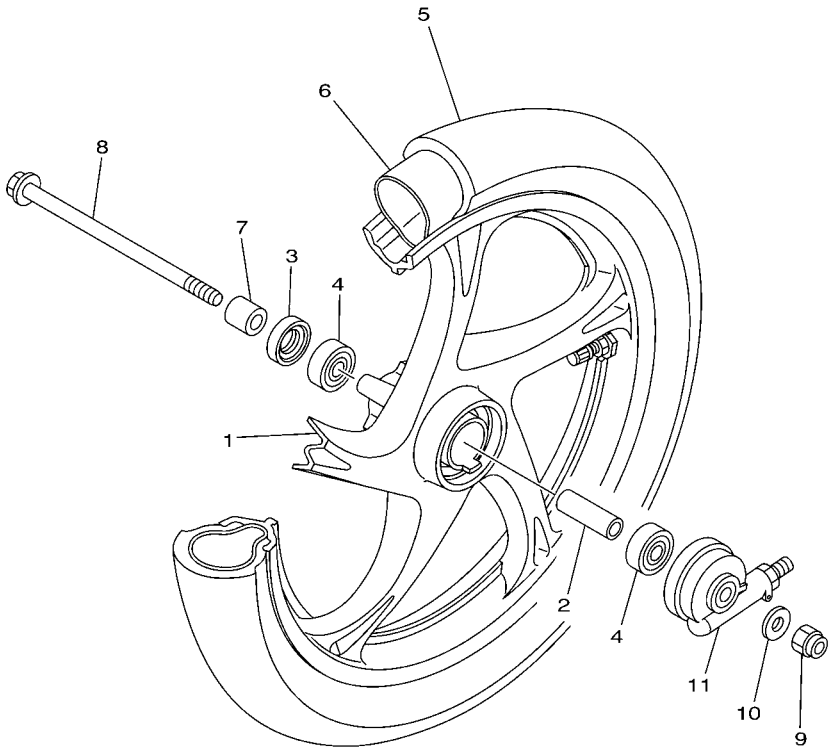

5WP4422-C220

FIG. 22 FRONT WHEEL

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–F5168–00–35	CAST WHEEL, FRONT	1					SL
2	90560–10292	SPACER	1					
3	93106–20816	OIL SEAL	1					
4	93306–300X8	BEARING	2					
5	94107–14802	TIRE (70/90-14M/C 34P NF59)	1					INOUE
6	94207–14802	TUBE (70/90-14M/C TR4)	1					INOUE
7	90387–10277	COLLAR	1					
8	3AY–F5181–01	AXLE, WHEEL	1					
9	90185–10811	NUT, SELF-LOCKING	1					
10	90201–101J1	WASHER, PLATE	1					
11	5TL–F5190–00	GEAR UNIT ASSY	1					

FIG. 23 FRONT BRAKE CALIPER

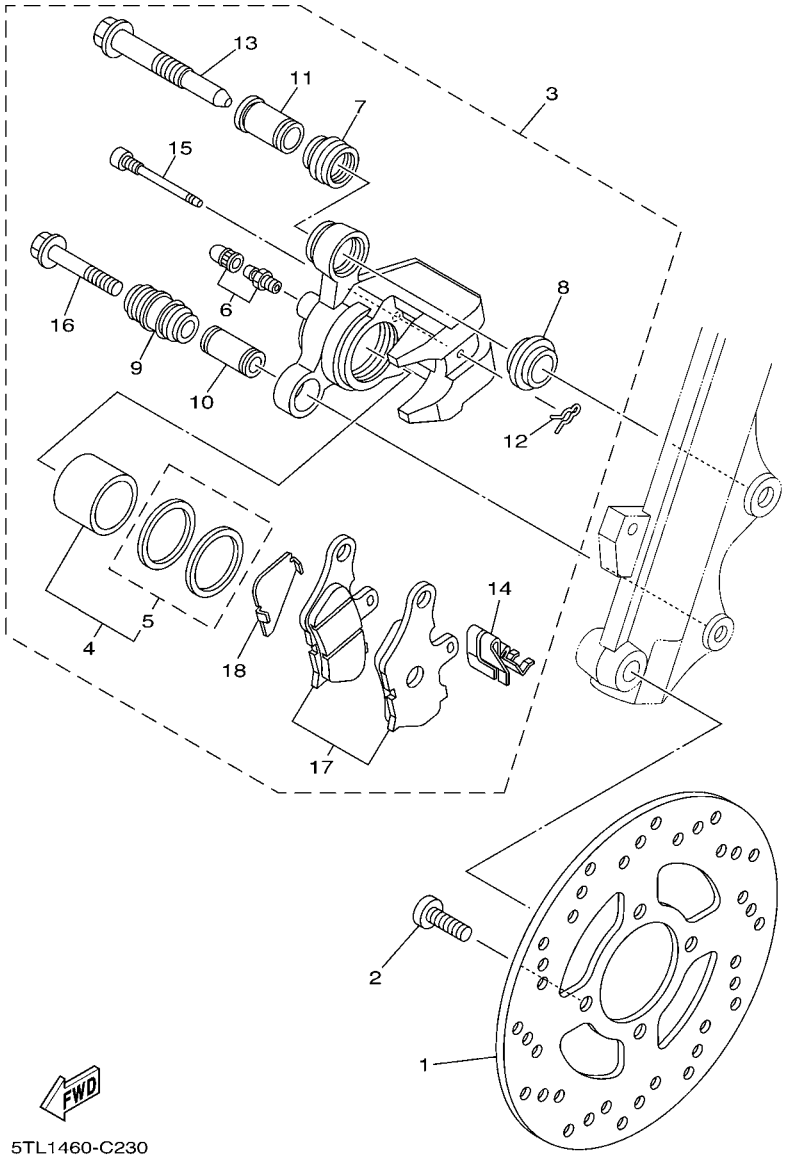

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–F582U–00	DISK, BRAKE (RIGHT)	1					
2	90111–08815	BOLT	4					
3	5TL–F580U–01	CALIPER ASSY (RIGHT)	1					
4	5TL–W0057–50	.PISTON ASSY, CALIPER	1					
5	5TL–W0047–50	..CALIPER SEAL KIT	1					
6	5TL–W0048–00	.BLEED SCREW KIT	1					
7	5KN–25937–00	.BOOT 2	1					
8	5KN–25917–00	.BOOT, CALIPER	1					
9	34X–25937–00	.BOOT 2	1					
10	5TL–F5838–00	.SLEEVE, CALIPER	1					
11	5TL–F5838–10	.SLEEVE, CALIPER	1					
12	5KN–25925–00	.CLIP	1					
13	5TL–F5914–00	.PIN, SLIDE	1					
14	5TL–F5919–01	.SUPPORT, PAD	1					
15	5TL–F5924–00	.PIN, PAD	1					
16	5KN–25926–01	.BOLT	1					
17	5TL–W0045–01	.BRAKE PAD KIT	1					
18	5TL–F5827–00	.SHIM, CALIPER	1					

FIG. 24 REAR WHEEL

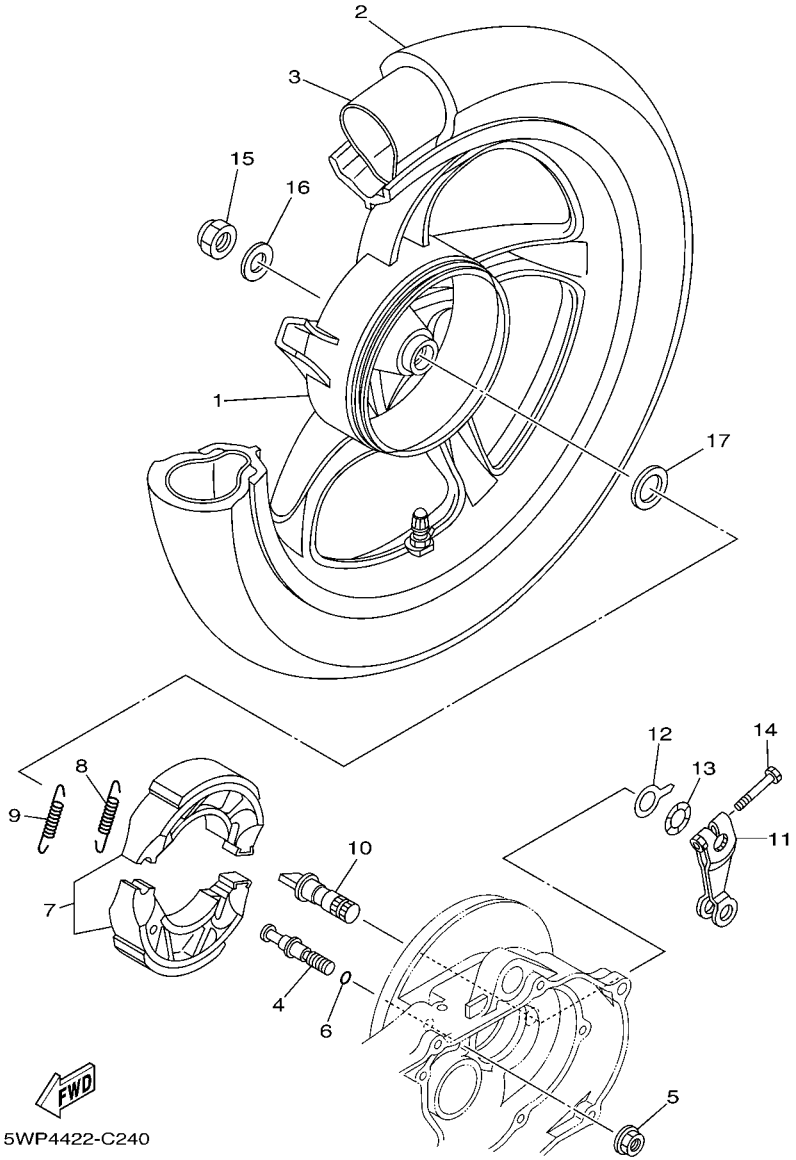

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–F5338–00–35	CAST WHEEL, REAR	1					SL
2	94108–14802	TIRE (80/90-14M/C 40P NR76)	1					INOUE
3	94208–14802	TUBE (80/90-14M/C TR4)	1					INOUE
4	5LW–F5326–01	PIN, PIVOT	1					
5	95707–10500	NUT, FLANGE	1					
6	93210–07802	O-RING	1					
7	5MX–F530K–00	BRAKE SHOE SET	1					
8	90506–12001	SPRING, TENSION	1					
9	90506–15001	SPRING, TENSION	1					
10	5MX–F5351–00	CAMSHAFT	1					
11	5LW–F5355–00	LEVER, CAMSHAFT	1					
12	5MX–F533A–00	PLATE, INDICATOR	1					
13	90206–14093	WASHER, WAVE	1					
14	90101–06278	BOLT	1					
15	90185–14814	NUT, SELF-LOCKING	1					
16	90201–14016	WASHER, PLATE	1					
17	90201–20276	WASHER, PLATE (T=1.0)	1					

FIG. 25 STEERING HANDLE & CABLE

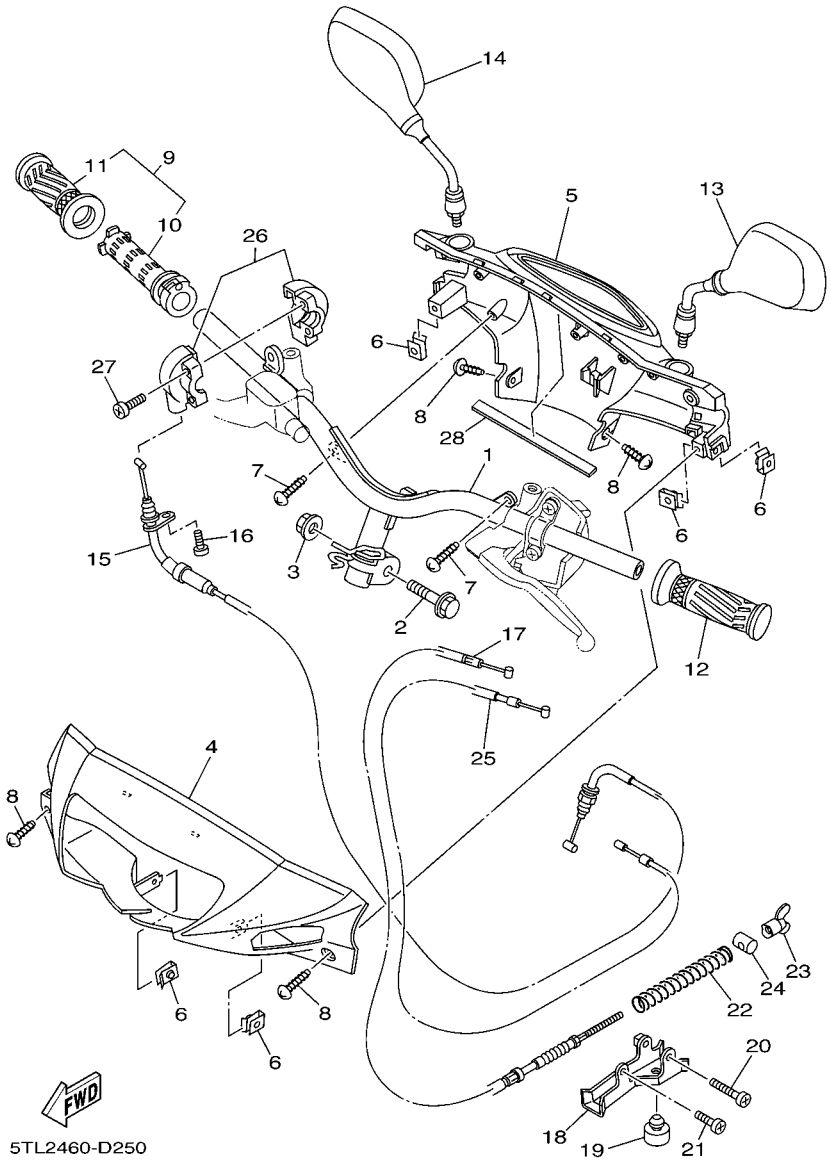

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–F6110–00	HANDLE COMP.	1					
2	90105–10036	BOLT, FLANGE	1					
3	90185–10808	NUT, SELF-LOCKING	1					
4	5TL–F6143–00–P0	COVER, HANDLEBAR UPPER 1	1					UR VRC1
	5TL–F6143–00–33	COVER, HANDLEBAR UPPER 1	1					UR YB
	5TL–F6143–00–P1	COVER, HANDLEBAR UPPER 1	1					UR DPBMC
5	5TL–F6145–00	COVER, HANDLEBAR UPPER 2	1					
6	90183–05807	NUT, SPRING	5					
7	97707–50016	SCREW, TAPPING	2					
8	97707–50012	SCREW, TAPPING	4					
9	5TL–F6240–00	GRIP ASSY	1					
10	5TL–F6243–00	.TUBE, THROTTLE GUIDE	1					
11	5TL–F6242–00	.GRIP (RIGHT)	1					
12	5TL–F6241–00	GRIP	1					
13	5MX–F6280–00	REAR VIEW MIRROR ASSY (LEFT)	1					
14	5MX–F6290–00	REAR VIEW MIRROR ASSY (RIGHT)	1					
15	5TL–F6311–00	CABLE, THROTTLE 1	1					
16	98507–05016	SCREW, PAN HEAD	1					
17	5TL–F6351–00	CABLE, BRAKE	1					
18	5MX–F637G–00	HOLDER, WIRE	1					
19	4YY–F7114–00	STOPPER, MAIN STAND	1					
20	98507–06040	SCREW, PAN HEAD	1					
21	98507–06014	SCREW, PAN HEAD	1					
22	90501–16003	SPRING, COMPRESSION	1					
23	90175–06013	NUT, WING	1					
24	90249–12008	PIN	1					
25	5TL–F6331–00	CABLE, STARTER 1	1					

FIG. 25 STEERING HANDLE & CABLE

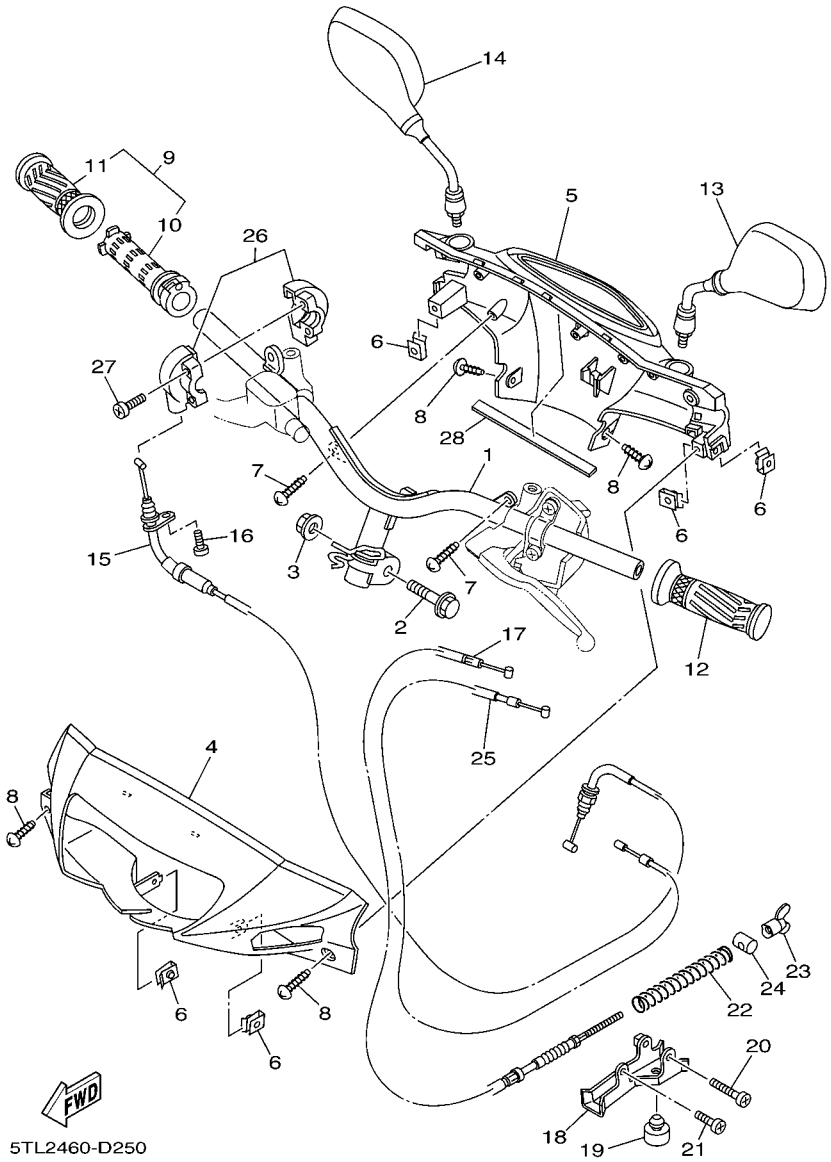

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
26	5TL–F6270–00	CABLE CONNECTOR CAP ASSY	1					
27	98507–05025	SCREW, PAN HEAD	2					
28	5TL–F6113–00	DAMPER	1					

FIG. 26 FRONT MASTER CYLINDER

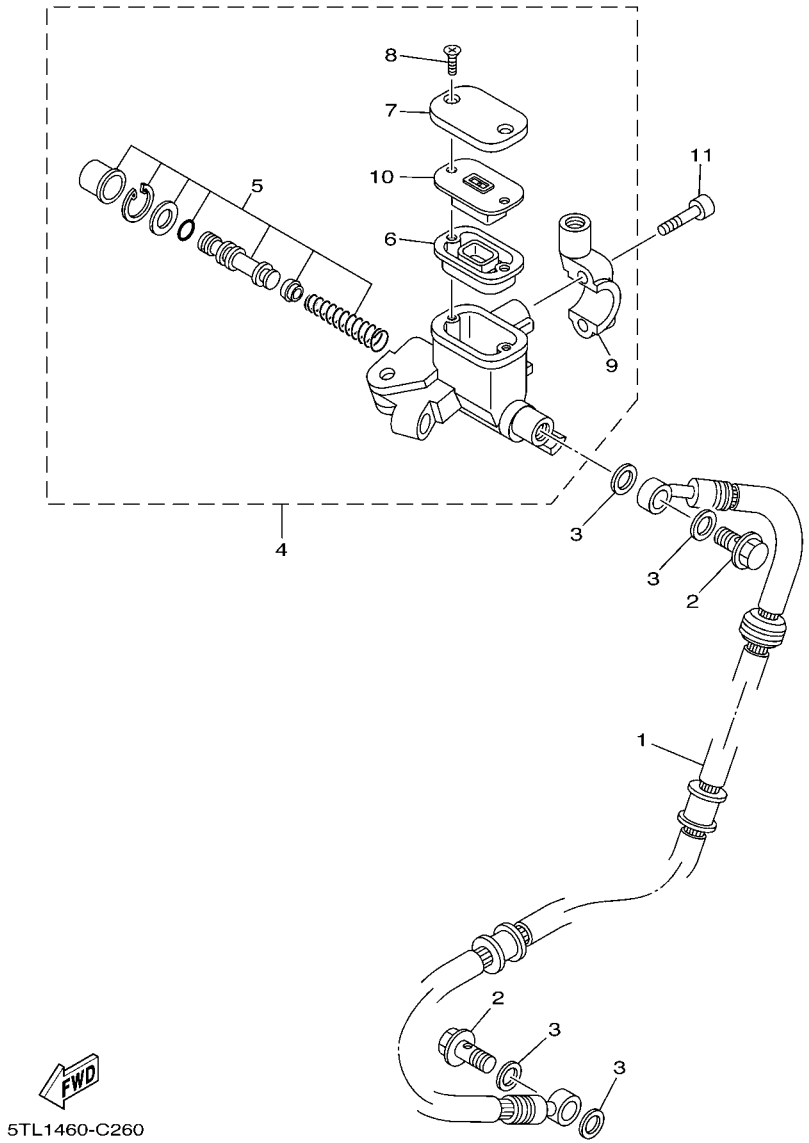

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–F5872–10	HOSE, BRAKE 1	1					
2	90401–10812	BOLT, UNION	2					
3	90201–10118	WASHER, PLATE	4					
4	5TL–F583T–01	MASTER CYLINDER ASSY	1					
5	5TL–W0041–01	.CYLINDER KIT, MASTER	1					
6	5TL–F5854–00	.DIAPHRAGM, RESERVOIR	1					
7	5TL–F5852–00	.CAP, RESERVOIR	1					
8	36Y–2589H–00	.SCREW	2					
9	5TL–F5867–00	.BRACKET, MASTER CYLINDER	1					
10	5TL–F5855–00	.BUSH,DIAPHRAGM	1					
11	91317–06025	BOLT	2					

FIG. 27 STAND & FOOTREST

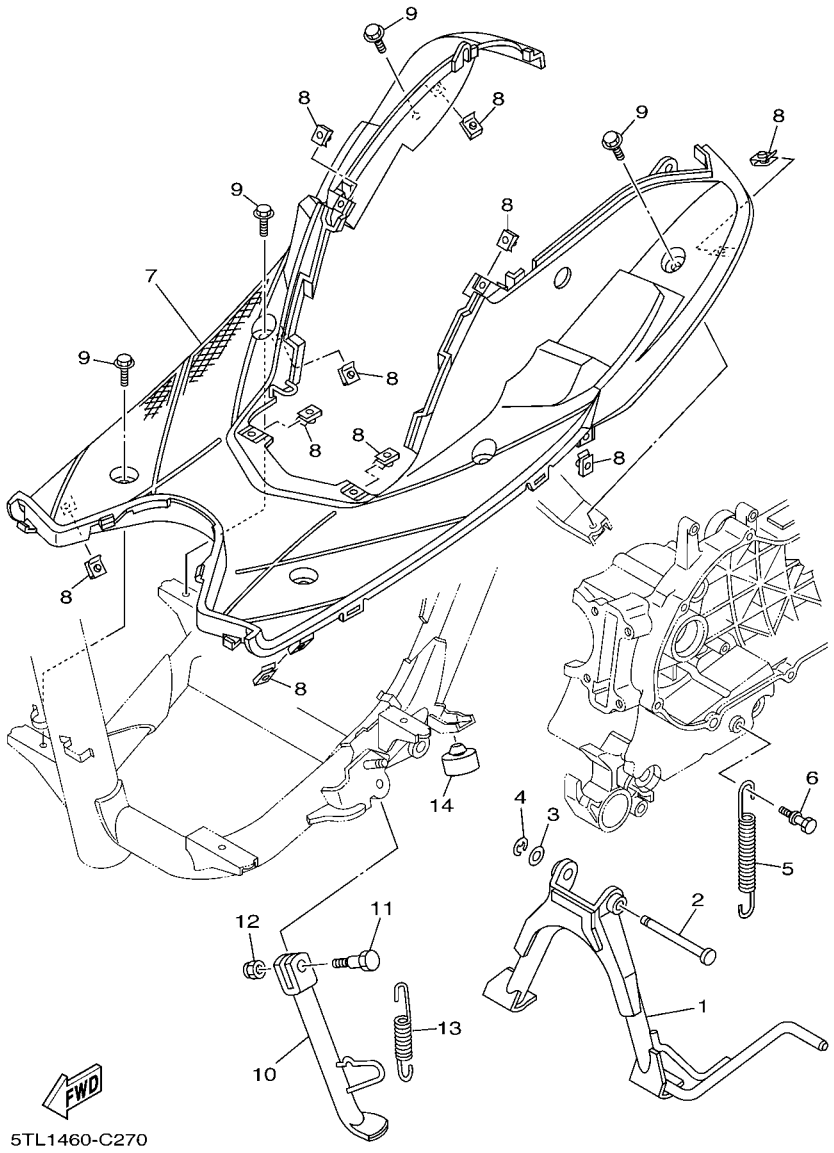

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–F7111–00–33	STAND, MAIN	1					YB
2	90249–10002	PIN	1					
3	90201–10119	WASHER, PLATE	1					
4	99001–08600	CIRCLIP	1					
5	90506–35002	SPRING, TENSION	1					
6	5LW–F7254–00	HOOK	1					
7	5TL–F7481–00	BOARD, FOOTREST	1					
8	90183–05807	NUT, SPRING	10					
9	90119–06044	BOLT, WITH WASHER	6					
10	5TL–F7311–00–33	STAND, SIDE	1					YB
11	90109–08881	BOLT	1					
12	90185–08055	NUT, SELF-LOCKING	1					
13	90506–20514	SPRING, TENSION	1					
14	4YY–F7114–00	STOPPER, MAIN STAND	1					

FIG. 28 LEG SHIELD

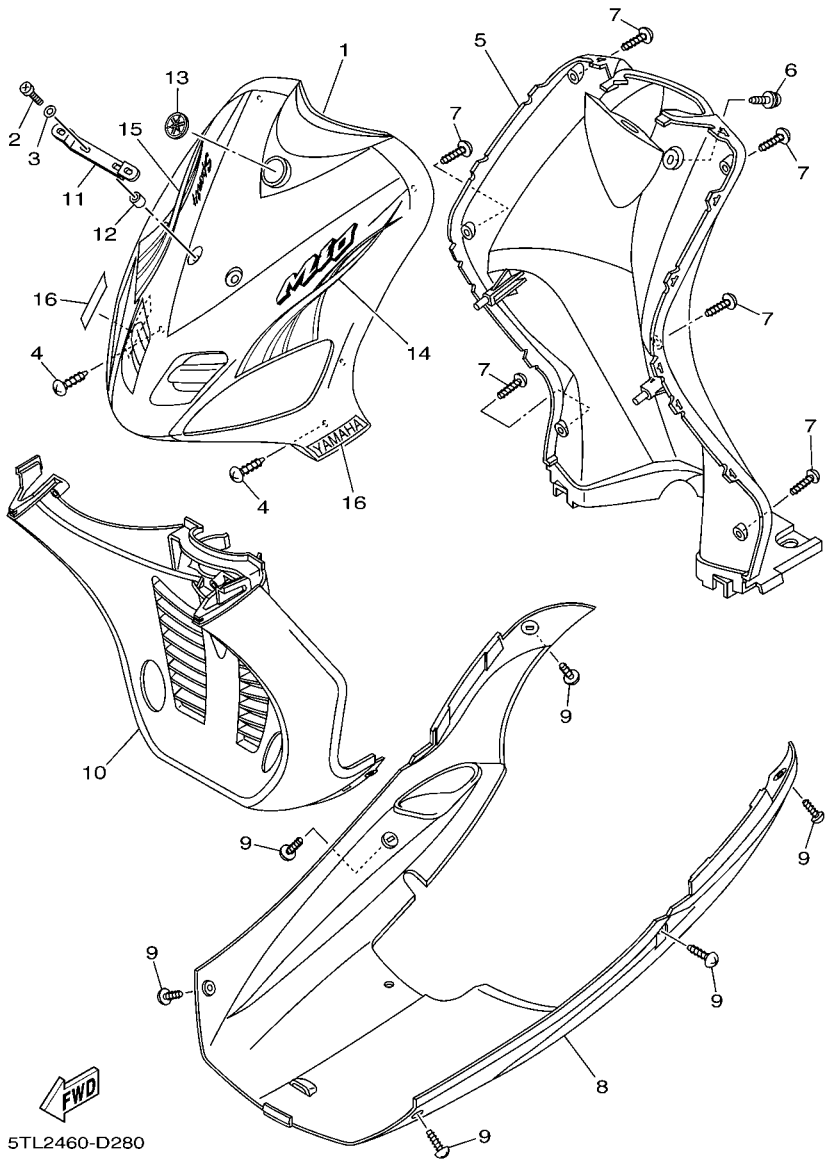

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–F8311–01–P0	LEG SHIELD 1	1					UR VRC1
	5TL–F8311–01–33	LEG SHIELD 1	1					UR YB
	5TL–F8311–01–P1	LEG SHIELD 1	1					UR DPBMC
2	98507–06025	SCREW, PAN HEAD	2					
3	92907–06600	WASHER, PLATE	2					
4	97707–50016	SCREW, TAPPING	2					
5	5TL–F8312–00	LEG SHIELD 2	1					
6	90159–06817	SCREW, WITH WASHER	1					
7	97707–50016	SCREW, TAPPING	6					
8	5TL–F8385–30	COVER, LOWER	1					UR FOR VRC1
	5TL–F8385–00	COVER, LOWER	1					UR FOR YB
	5TL–F8385–20	COVER, LOWER	1					UR FOR DPBMC
9	97707–50016	SCREW, TAPPING	6					
10	5TL–F1552–30	FENDER, INNER	1					UR FOR VRC1
	5TL–F1552–00	FENDER, INNER	1					UR FOR YB
	5TL–F1552–20	FENDER, INNER	1					UR FOR DPBMC
11	3AY–H454E–00	BRACKET, NUMBER PLATE	1					
12	90387–06818	COLLAR	2					
13	5TL–F313B–00	EMBLEM 1	1					
14	5TL–F8391–40	GRAPHIC 1	1					UR FOR VRC1
	5TL–F8391–50	GRAPHIC 1	1					UR FOR YB
	5TL–F8391–60	GRAPHIC 1	1					UR FOR DPBMC
15	5TL–F8392–40	GRAPHIC 2	1					UR FOR VRC1
	5TL–F8392–50	GRAPHIC 2	1					UR FOR YB
	5TL–F8392–60	GRAPHIC 2	1					UR FOR DPBMC
16	5MX–F153E–30	EMBLEM, YAMAHA	2					

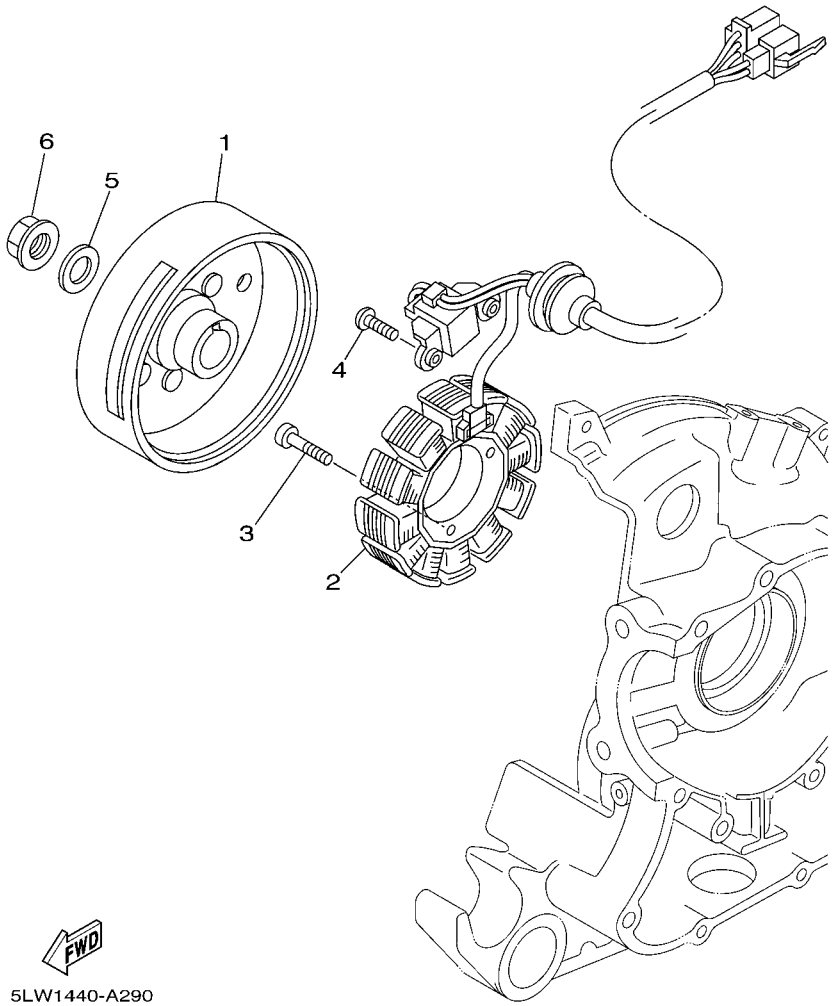

FIG. 29 GENERATOR

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–H1450–00	ROTOR ASSY	1					
2	5TL–H1410–10	STATOR ASSY	1					
3	91317–06020	BOLT	3					
4	98507–06016	SCREW, PAN HEAD	2					
5	90201–12688	WASHER, PLATE	1					
6	90179–12248	NUT	1					

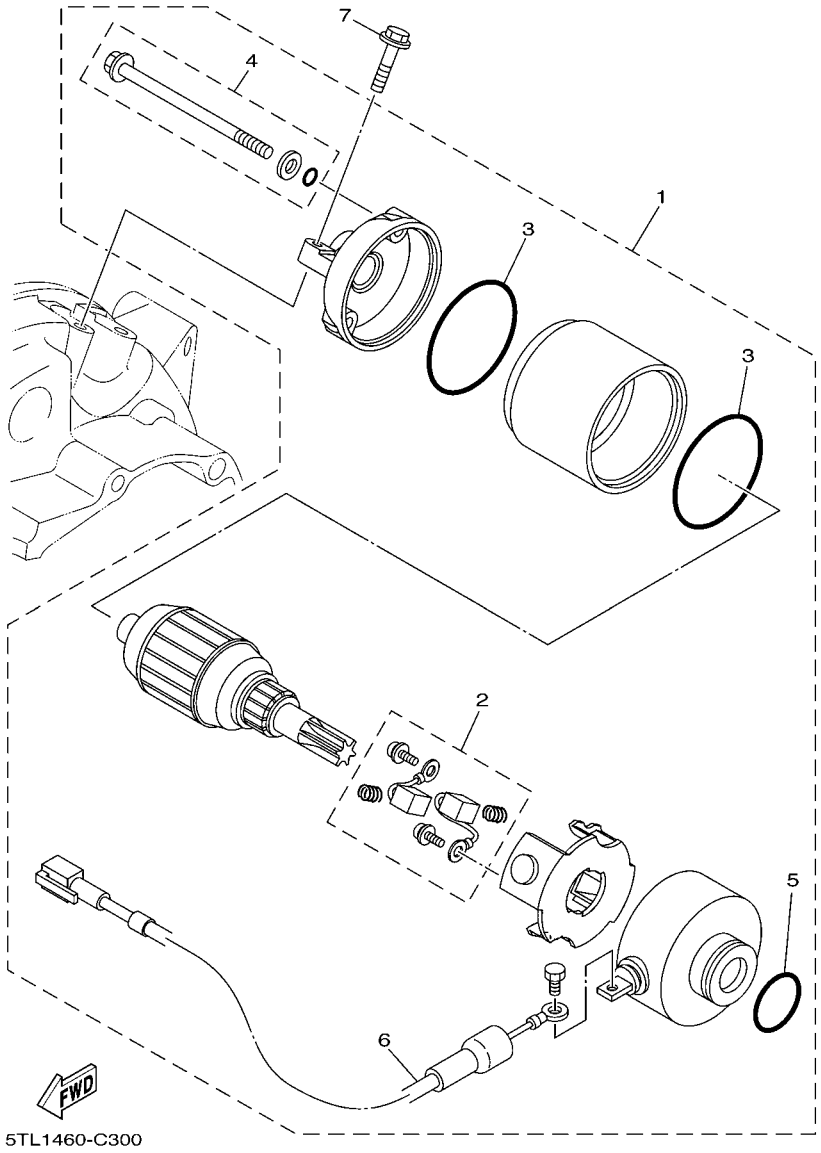

FIG. 30 STARTING MOTOR

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–H1800–00	STARTING MOTOR ASSY	1					
2	5TL–H1801–00	.BRUSH SET	1					
3	5TL–H182M–00	.O-RING	2					
4	3UH–H1828–01	.BOLT 2	2					
5	5TL–H182L–00	.O-RING 1	1					
6	5TL–H183G–00	.CORD COMP.	1					
7	97507–06525	BOLT, WITH WASHER	2					

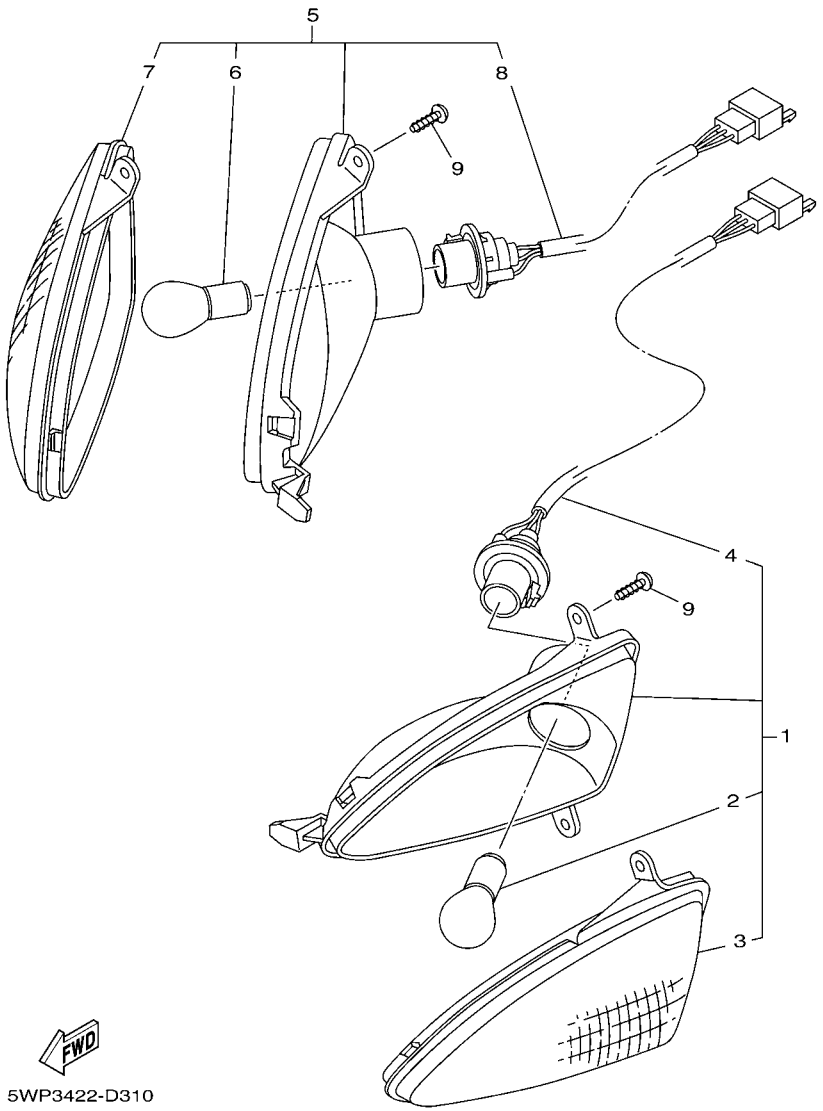

FIG. 31 FLASHER LIGHT

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–H3310–10	FRONT FLASHER LIGHT ASSY 1	1					
2	5VV–H3311–00	.BULB, FLASHER (12V-21/5W)	1					AMBER
3	5VV–H3312–00	.LENS, FLASHER	1					
4	5TL–H4140–10	.SOCKET CORD ASSY	1					
5	5TL–H3320–10	FRONT FLASHER LIGHT ASSY 2	1					
6	5VV–H3311–00	.BULB, FLASHER (12V-21/5W)	1					AMBER
7	5VV–H3322–00	.LENS, FLASHER 2	1					
8	5TL–H4150–10	.SOCKET CORD ASSY 2	1					
9	97707–50016	SCREW, TAPPING	4					

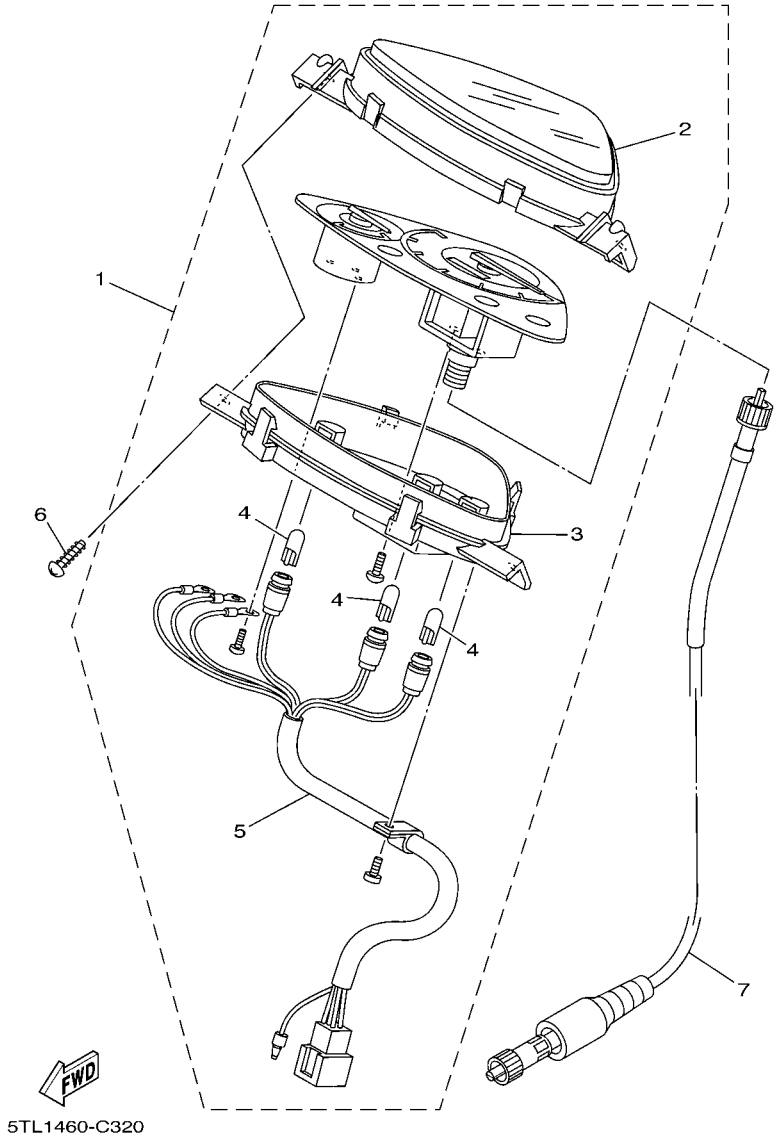

FIG. 32 METER

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–H3510–00	SPEEDOMETER ASSY	1					
2	5TL–H3511–00	.LENS, SPEEDOMETER	1					
3	5TL–H353F–00	.CASE, METER LOWER	1					
4	2GV–H3517–00	.BULB (T-6.5 12V-1.7W)	3					
5	5TL–H3509–00	.SOCKET CORD ASSY	1					
6	97707–50016	SCREW, TAPPING	3					
7	5TL–H3550–00	SPEEDOMETER CABLE ASSY	1					

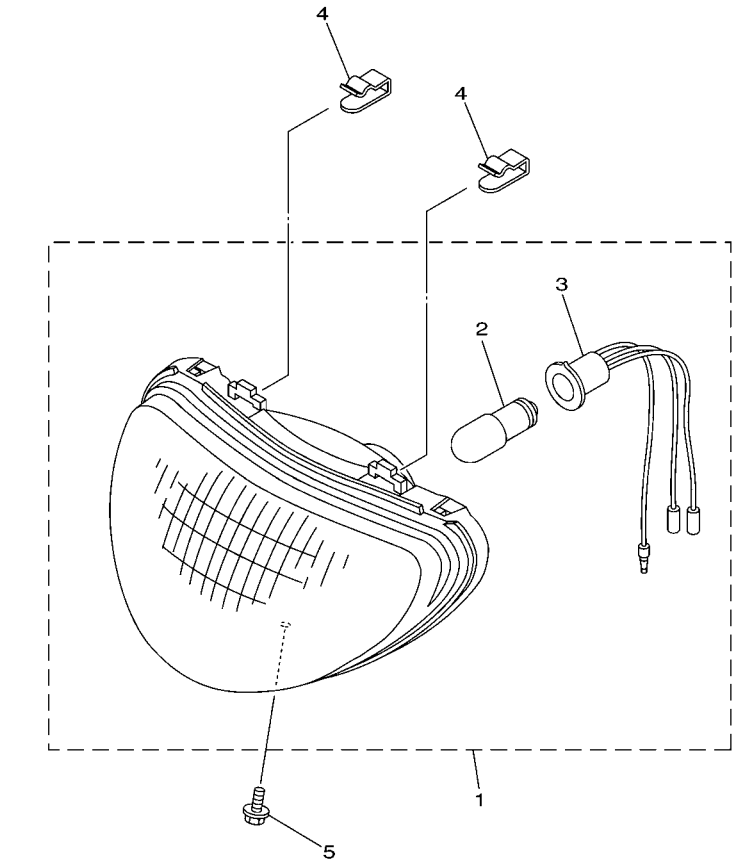

5TL1460-C330

FIG. 33 HEADLIGHT

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–H4310–10	HEADLIGHT UNIT ASSY	1					
2	5HV–H4314–00	.BULB (12V-32/32W)	1					
3	5TL–H4340–00	.SOCKET CORD ASSY 1	1					
4	5TL–H4374–00	CLIP	2					
5	95807–06010	BOLT, FLANGE	1					

FIG. 34 TAILLIGHT

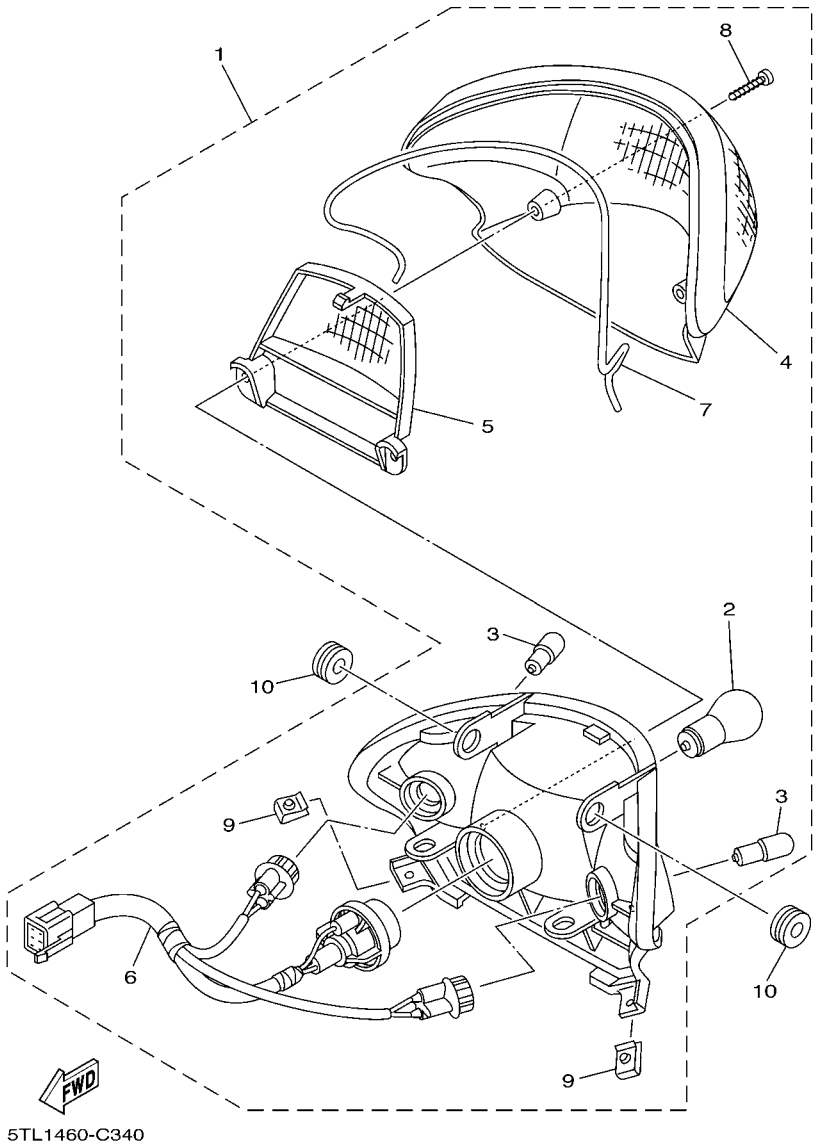

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–H4710–00	TAILLIGHT UNIT ASSY	1					
2	4AC–H4714–00	.BULB (12V-21/5W)	1					
3	5HV–H3311–00	.BULB, FLASHER (12V-10W)	2					AMBER
4	5TL–H4743–00	.LENS, LICENCE LIGHT	1					
5	5TL–H4721–00	.LENS, TAILLIGHT	1					
6	5TL–H4735–00	.CORD ASSY	1					
7	5TL–H4723–00	.GASKET, TAIL LENS	1					
8	9770L–40620	.SCREW, TAPPING	2					
9	90183–05807	.NUT, SPRING	2					
10	90480–13428	GROMMET	2					

FIG. 35 HANDLE SWITCH & LEVER

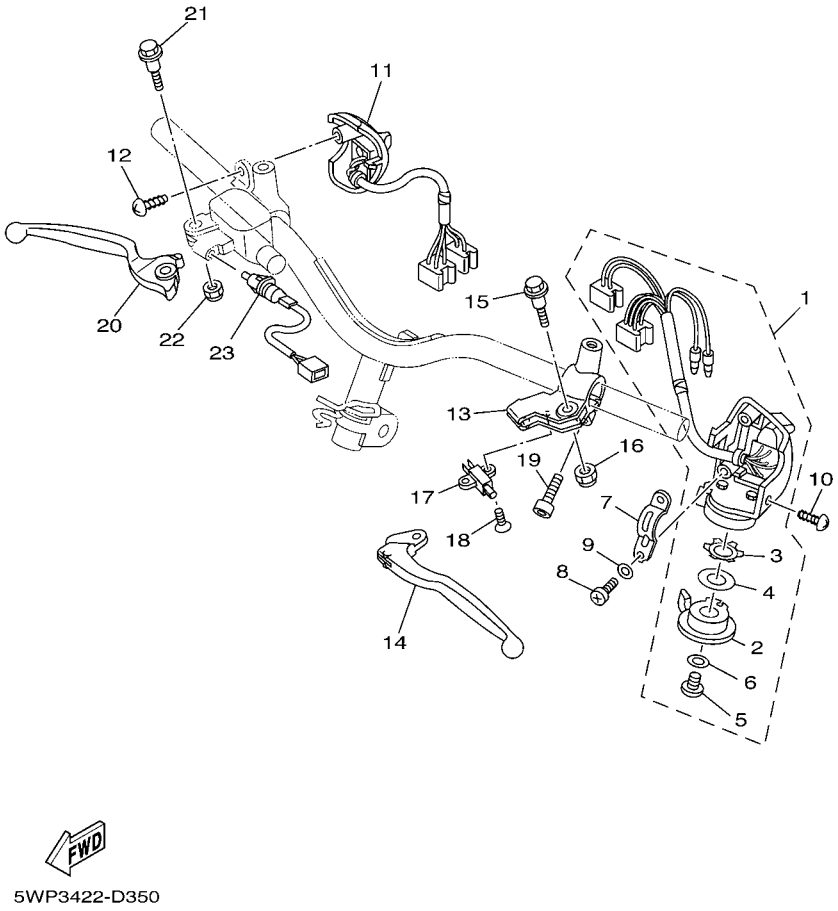

5WP3422-D350

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–H3973–10	SWITCH, HANDLE 3	1					
2	5TL–H3941–00	.LEVER, STARTER	1					
3	5TL–H3947–00	.SPRING	1					
4	5TL–H397X–00	.SPACER	1					
5	9850L–06008	.SCREW, PAN HEAD	1					
6	9290L–06200	.WASHER	1					
7	5TL–H3955–00	BRACKET 1	1					
8	98507–05016	SCREW, PAN HEAD	2					
9	92907–05600	WASHER, PLATE	2					
10	97707–50012	SCREW, TAPPING	1					
11	5TL–H3975–10	SWITCH, HANDLE 2	1					
12	97707–50016	SCREW, TAPPING	1					
13	5TL–H2911–00	HOLDER, LEVER 1	1					
14	5TL–H3912–00	LEVER 1	1					
15	90109–06814	BOLT	1					
16	95607–06100	NUT, U	1					
17	5TL–H3980–00	FRONT STOP SWITCH ASSY	1					
18	9870M–03008	SCREW, FLAT HEAD	1					
19	91317–06020	BOLT	1					
20	5TL–H3922–00	LEVER 2	1					
21	90109–06577	BOLT	1					
22	95607–06100	NUT, U	1					
23	4US–H3980–00	FRONT STOP SWITCH ASSY	1					

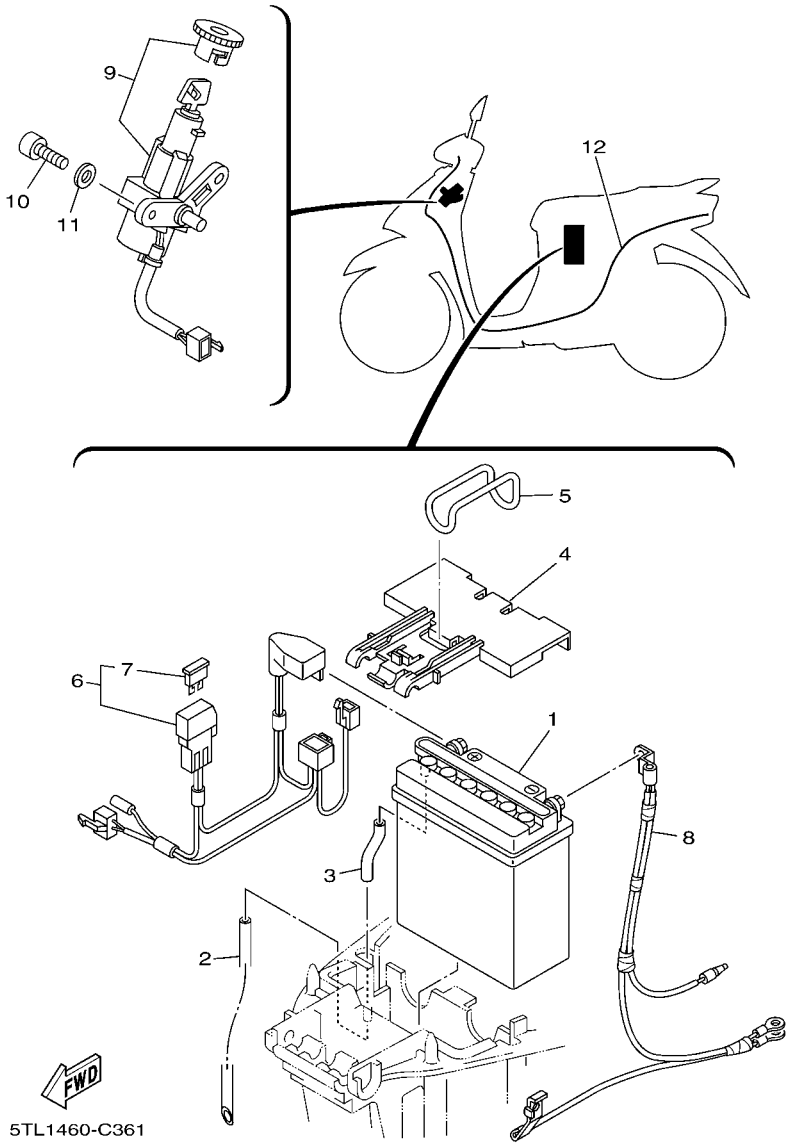

FIG. 36 ELECTRICAL 1

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	3AY–H2110–00	BATTERY ASSY (YB5L-B 12V-5AH)	1					UR YUASA
	3AY–H2110–10	BATTERY ASSY (GM5Z-3B)	1					UR
2	90445–08815	HOSE (L550)	1					
3	90445–08819	HOSE (L40)	1					
4	5TL–H2129–00	COVER, BATTERY	1					
5	5TL–H2131–00	BAND, BATTERY	1					
6	5TL–H2150–00	FUSE HOLDER ASSY	1					
7	5TL–H2151–00	.FUSE (10A)	1					
8	5TL–H2116–00	WIRE, MINUS LEAD	1					
9	5TL–H2501–00	MAIN SWITCH STEERING LOCK	1					
10	91317–06014	BOLT	2					
11	92907–06600	WASHER, PLATE	2					
12	5TL–H2590–10	WIRE HARNESS ASSY	1					

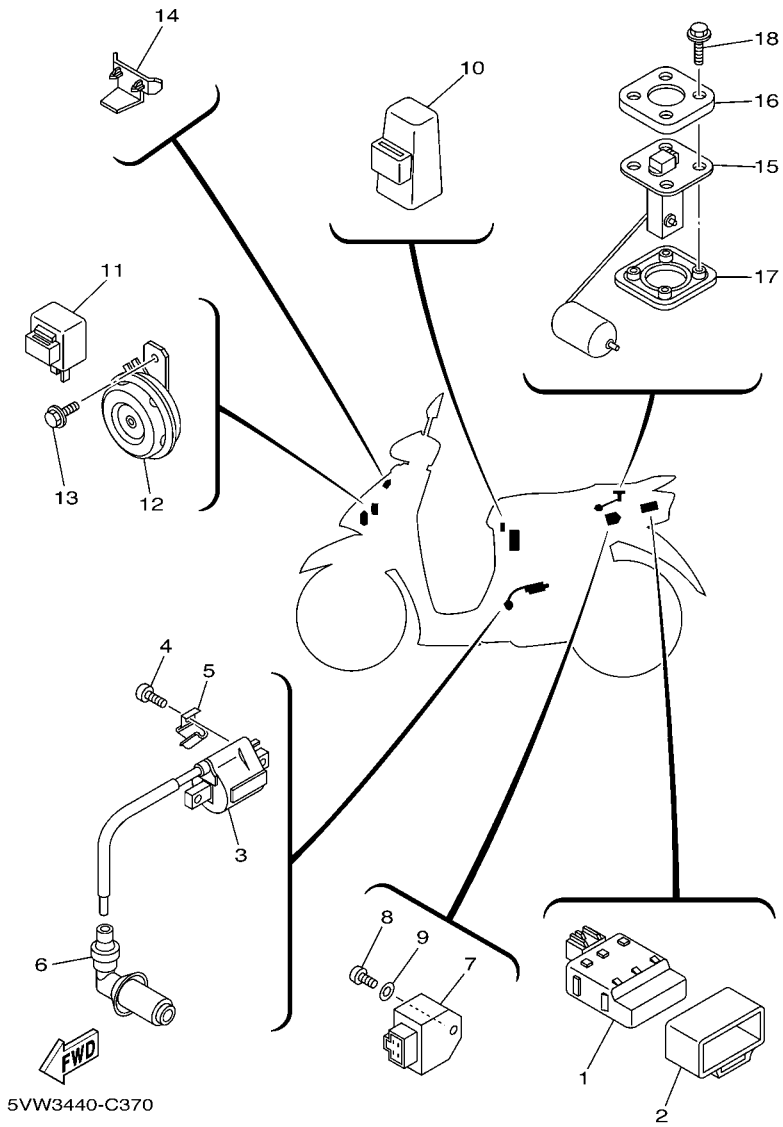

FIG. 37 ELECTRICAL 2

REF. NO.	PART NO.	DESCRIPTION	5TL2					REMARKS
1	5TL–H5540–00	C.D.I. UNIT ASSY	1					
2	5LL–H5546–00	BAND	1					
3	5TL–H2310–00	IGNITION COIL ASSY	1					
4	98507–06018	SCREW,PAN HEAD	2					
5	90465–10037	CLAMP	1					
6	5MX–H2370–00	PLUG CAP ASSY	1					
7	5TL–H1960–00	RECTIFIER & REGULATOR ASSY	1					
8	98507–06016	SCREW, PAN HEAD	1					
9	92907–06600	WASHER, PLATE	1					
10	5TN–H1940–00	STARTER RELAY ASSY	1					
11	5TL–H3350–00	FLASHER RELAY ASSY	1					
12	5MX–H3371–00	HORN	1					
13	95807–06010	BOLT, FLANGE	1					
14	5TL–F835W–00	HOLDER, WIRE	1					
15	5TL–H5752–00	SENDER UNIT ASSY, FUEL METER	1					
16	5ER–H5757–00	RETAINER	1					
17	4US–H5753–00	GASKET, SENDER UNIT	1					
18	90119–05071	BOLT, WITH WASHER	4					

PART NO.	REF. NO.
5LW–11133–10	1 – 2
5LW–11134–10	1 – 3
5LW–11681–00	2 – 3
33M–12117–00	3 – 7
1AA–12118–00	3 – 6
22F–12151–10	3 – 8
22F–12159–00	3 – 9
5LW–12231–00	4 – 7
5LW–12241–00	4 – 8
663–14159–00	8 – 17
4JH–14160–00	8 – 14
3TJ–14536–40	8 – 28
676–14548–00	8 – 19
4TV–14557–00	8 – 25
3TJ–14562–40	8 – 16
3TJ–14564–40	8 – 6
688–14592–00	8 – 20
5BF–14919–00	8 – 36
3TJ–14952–40	8 – 15
5LW–15659–01	11 – 8
5LW–17632–00	13 – 12
5LW–17653–00	13 – 14
164–22216–00	10 – 3
156–23411–00	19 – 18
22F–23411–01	19 – 22
156–23412–00	19 – 19
22F–23412–01	19 – 21
5TL–2341E–00	19 – 20
5TL–2341E–10	19 – 23
4X8–24512–00	20 – 9
36Y–2589H–00	26 – 8
5KN–25917–00	23 – 8
5KN–25925–00	23 – 12
5KN–25926–01	23 – 16
34X–25937–00	23 – 9
5KN–25937–00	23 – 7
5TL–E1102–00	1 – 1
5LW–E111F–00	4 – 12
5MX–E1145–00	4 – 4
5LW–E1155–00	1 – 11
5LW–E1165–00	1 – 9
5LW–E1181–00	1 – 19
5LW–E1185–00	1 – 8
4ST–E1186–00	1 – 14
5LW–E1310–00	1 – 23
5MX–E1351–00	1 – 24
5MX–E1391–00	10 – 21
5TL–E1400–10	2 – 1
5TL–E1412–00	2 – 2
5TL–E1422–00	2 – 6
5MX–E1603–00	2 – 15
5MX–E1605–00	2 – 15
5MX–E1607–00	2 – 15
5MX–E1631–00	2 – 12
5MX–E1633–10	2 – 13
5MX–E1636–00	2 – 12
5MX–E1638–00	2 – 12
5MX–E1651–00	2 – 5
5LW–E2111–00	3 – 1
5MX–E2113–00	3 – 5
5MX–E2116–00	3 – 4
5MX–E2119–00	3 – 3
5LW–E2121–00	3 – 2
4ST–E2156–00	3 – 11
4CW–E2157–00	4 – 15
5LW–E2170–01	4 – 1
5MX–E2176–00	4 – 3
5MX–E2210–00	4 – 9
5MX–E2213–00	4 – 10
5VV–E2231–00	4 – 7
5MX–E2241–00	4 – 8
5LW–E2611–00	6 – 17
5TL–E2631–10	6 – 20
5TL–E2633–00	6 – 22
5LW–E2651–00	6 – 1
5LW–E2652–00	6 – 3
5LW–E2653–00	6 – 5
5LW–E2658–00	6 – 2
5LW–E2659–02	6 – 7
5LW–E2668–02	6 – 8
5TL–E2669–00	6 – 9
5TL–E2681–10	6 – 21
5TL–E2682–00	6 – 4
5LW–E3185–00	1 – 10
5MX–E3300–00	5 – 1
5LW–E3324–00	2 – 10
5LW–E3411–00	5 – 5
5LW–E3416–00	10 – 20
5LW–E3452–00	2 – 7
5MX–E3474–01	7 – 6
5LW–E3475–00	5 – 2
5MX–E3556–10	7 – 3
5LW–E3569–00	6 – 19
5MX–E3575–01	7 – 16
5TL–E3585–00	7 – 1
5MX–E3595–00	7 – 2
5LW–E3769–00	10 – 33
5TL–E4116–00	8 – 3
5TL–E4133–00	8 – 4
	8 – 34
5TL–E414G–00	8 – 10
5TL–E4170–00	8 – 27
5TL–E4171–00	8 – 33
5TL–E4173–00	8 – 31
5TL–E4174–00	8 – 32
5TL–E4191–00	8 – 23
5TL–E4196–00	8 – 35
5TL–E4275–00	8 – 29
5TL–E4280–00	8 – 30
5TL–E4411–00	7 – 7
5TL–E4412–00	7 – 8
4ST–E443E–00	11 – 6
5TL–E443E–00	7 – 12
5TL–E4450–00	7 – 9
5TL–E4452–00	7 – 11
5TL–E4453–00	7 – 10
5TL–E4462–00	7 – 15
5TL–E4531–00	8 – 26
5TL–E4610–00–33	9 – 1
5MX–E4613–00	9 – 6
5TL–E4718–00	9 – 2
5TL–E4747–00	9 – 14
5TL–E4770–00	9 – 8
5TL–E479M–00	9 – 15
5TL–E4901–01	8 – 1
5TL–E4922–00	8 – 24
5TL–E4923–00	8 – 13
5TL–E4933–00	8 – 7
5TL–E4936–00	8 – 5
5TL–E4940–00	8 – 2
5TL–E4943–29	8 – 11
5TL–E4945–00	8 – 37
5TL–E4947–00	8 – 9
5TL–E4948–02	8 – 12
5TL–E4984–00	8 – 21
5TL–E4985–00	8 – 18
5TL–E4987–00	1 – 25
5TL–E4D25–00	8 – 8
5LW–E5113–00	10 – 31
5TL–E5150–10	10 – 1
5TL–E5191–00	11 – 9
5TL–E5315–00	11 – 25
5TL–E5333–00	11 – 17
5LW–E5351–00	5 – 4
5TL–E5362–00	10 – 32
5LW–E5363–00	10 – 24
5TL–E5371–00	10 – 5
5LW–E5371–01	11 – 5
5TL–E5373–00	10 – 6
5TL–E5379–00	11 – 26
5TL–E5404–00	11 – 21
5TL–E5407–00	11 – 16
5TL–E5411–00–33	11 – 1
5TL–E5413–00	11 – 34
5LW–E5417–00	10 – 12
5LW–E5421–00	10 – 26
5MX–E5451–00	11 – 2
5MX–E5453–00	10 – 15
5LW–E5461–00	10 – 27
5TL–E5471–00	11 – 31
5TL–E5472–00	11 – 18
5TL–E5473–00	11 – 38
5TL–E5474–00	11 – 39
5TL–E5475–00	11 – 23
5TL–E5484–00	11 – 40
5TL–E5492–00	11 – 24
5TL–E5494–00	11 – 27
5TL–E5497–00	11 – 22
5MX–E5521–00	12 – 6
5TL–E5524–00	12 – 1
5LW–E5532–00	12 – 8
5VV–E5570–00	12 – 4
5TL–E5601–10	12 – 10
5TL–E5620–00	12 – 16
4VP–E5630–00	12 – 18
5TL–E5650–00	12 – 5
5MX–E5657–00	13 – 20
5MX–E5673–00	12 – 19
5LW–E6111–00	13 – 1
5TL–E6611–02	13 – 24
5TL–E6620–01	13 – 23
5TL–E7211–00	14 – 7
5TL–E7410–00	14 – 1
5TL–E7421–10	14 – 6
5TL–E7465–00	13 – 27
5TL–E7465–10	13 – 28
5TL–E7611–00	13 – 18
5LW–E7620–00	13 – 10
5TL–E7623–00	13 – 13
5TL–E7641–01	13 – 17
5TL–E7660–00	13 – 25
5TL–E7664–00	13 – 29
5TL–E7668–00	13 – 32
5TL–E7670–00	13 – 26
5TL–E7683–00	13 – 30
5TL–E7684–00	13 – 31
5TL–F1110–00–33	15 – 1
5TL–F1161–00	19 – 31
5TL–F117K–01	21 – 14
5TL–F1410–00	15 – 2
5TL–F1459–00	15 – 9
5TL–F1511–00–33	16 – 1
5TL–F1511–00–P0	16 – 1
5TL–F1511–00–P1	16 – 1
5MX–F153E–30	17 – 14
	28 – 16
5TL–F1552–00	28 – 10
5TL–F1552–20	28 – 10
5TL–F1552–30	28 – 10
5TL–F1611–00	16 – 5
5TL–F1621–00	16 – 9
5TL–F1691–00	7 – 22
5TL–F1711–00	17 – 1
5TL–F1721–00–33	17 – 3
5TL–F1721–00–P0	17 – 3
5TL–F1721–00–P1	17 – 3
5TL–F1731–00–33	17 – 4
5TL–F1731–00–P0	17 – 4
5TL–F1731–00–P1	17 – 4
5TL–F173E–40	17 – 12
5TL–F173E–50	17 – 12
5TL–F173E–60	17 – 12
5TL–F173F–40	17 – 13
5TL–F173F–50	17 – 13
5TL–F173F–60	17 – 13
5TL–F1741–00–33	17 – 5
5TL–F1741–00–P0	17 – 5
5TL–F1741–00–P1	17 – 5
5TL–F1746–00	17 – 10
5TL–F2123–00	10 – 4
5TL–F2210–00	18 – 1
5TL–F3100–00	19 – 1
5TL–F3110–00	19 – 4
5TL–F3111–00	19 – 14
5TL–F3126–00	19 – 3
5TL–F3136–00	19 – 2
5TL–F313B–00	28 – 13
5TL–F3141–00	19 – 11
5LM–F3144–00	19 – 10
3AY–F3145–00	19 – 16
2JG–F3147–00	19 – 15
5LM–F3152–00	19 – 7
1T8–F3156–00	19 – 17
2JG–F3157–00	19 – 6
509–F3158–L0	19 – 8
5MX–F3170–00	19 – 5
278–F3181–50	19 – 9
5TL–F3340–00	19 – 12
5TL–F3346–00	19 – 13
5TL–F334G–00	19 – 26
5TL–F3416–00	19 – 24
5TL–F4110–00–33	20 – 1
5TL–F4188–00	20 – 2
5TL–F4311–00	20 – 4
5TL–F4312–00	20 – 5
4TT–F4500–00	20 – 8
4YY–F4610–00	20 – 12
5TL–F4705–00	21 – 11
5TL–F470F–00	21 – 2
5TL–F4726–00	21 – 9
5TL–F4727–00	21 – 8
5TL–F4730–00	21 – 1
5TL–F473R–00	21 – 4
5TL–F4741–00	21 – 3
5TL–F4773–10–35	21 – 18
5TL–F478E–00	21 – 17
5TL–F4792–00	21 – 12
5TL–F4799–00	21 – 15
5TL–F5168–00–35	22 – 1
5TL–F5181–00	15 – 11
3AY–F5181–01	22 – 8
5TL–F5190–00	22 – 11
5MX–F530K–00	24 – 7
5LW–F5326–01	24 – 4
5TL–F5338–00–35	24 – 1
5MX–F533A–00	24 – 12
5MX–F5351–00	24 – 10
5LW–F5355–00	24 – 11
5TL–F580U–01	23 – 3
5TL–F5827–00	23 – 18
5TL–F582U–00	23 – 1
5TL–F5838–00	23 – 10
5TL–F5838–10	23 – 11
5TL–F583T–01	26 – 4
5TL–F5852–00	26 – 7
5TL–F5854–00	26 – 6
5TL–F5855–00	26 – 10
5TL–F5867–00	26 – 9

PART NO.	REF. NO.
5TL–F5872–10	26 – 1
5TL–F5875–00	19 – 27
5TL–F5876–00	19 – 28
5TL–F5887–00	19 – 29
5TL–F5914–00	23 – 13
5TL–F5919–01	23 – 14
5TL–F5924–00	23 – 15
5TL–F6110–00	25 – 1
5TL–F6113–00	25 – 28
5TL–F6143–00–33	25 – 4
5TL–F6143–00–P0	25 – 4
5TL–F6143–00–P1	25 – 4
5TL–F6145–00	25 – 5
5TL–F6199–00	21 – 5
5TL–F6240–00	25 – 9
5TL–F6241–00	25 – 12
5TL–F6242–00	25 – 11
5TL–F6243–00	25 – 10
5TL–F6270–00	25 – 26
5MX–F6280–00	25 – 13
5MX–F6290–00	25 – 14
5TL–F6311–00	25 – 15
5TL–F6331–00	25 – 25
5TL–F6351–00	25 – 17
5MX–F637G–00	25 – 18
5TL–F7111–00–33	27 – 1
4YY–F7114–00	25 – 19
	27 – 14
5MX–F7114–00	15 – 5
5MX–F7121–00	10 – 2
5LW–F7254–00	27 – 6
5TL–F7311–00–33	27 – 10
5TL–F7481–00	27 – 7
5TL–F8100–00	15 – 16
5TL–F8311–01–33	28 – 1
5TL–F8311–01–P0	28 – 1
5TL–F8311–01–P1	28 – 1
5TL–F8312–00	28 – 5
5TL–F8356–00	15 – 14
5TL–F835W–00	37 – 14
5LM–F8371–00	17 – 11
5TL–F8385–00	28 – 8
5TL–F8385–20	28 – 8
5TL–F8385–30	28 – 8
5TL–F8391–40	28 – 14
5TL–F8391–50	28 – 14
5TL–F8391–60	28 – 14
5TL–F8392–40	28 – 15
5TL–F8392–50	28 – 15
5TL–F8392–60	28 – 15
5TL–H1410–10	29 – 2
5TL–H1450–00	29 – 1
5TL–H1800–00	30 – 1
5TL–H1801–00	30 – 2
3UH–H1828–01	30 – 4
5TL–H182L–00	30 – 5
5TL–H182M–00	30 – 3
5TL–H183G–00	30 – 6
5TN–H1940–00	37 – 10
5TL–H1960–00	37 – 7
3AY–H2110–00	36 – 1
3AY–H2110–10	36 – 1
5TL–H2116–00	36 – 8
5TL–H2129–00	36 – 4
5TL–H2131–00	36 – 5
5TL–H2150–00	36 – 6
5TL–H2151–00	36 – 7
5TL–H2310–00	37 – 3
5MX–H2370–00	37 – 6
5TL–H2501–00	36 – 9
5TL–H2590–10	36 – 12
5TL–H2911–00	35 – 13
5TL–H3310–10	31 – 1
5HV–H3311–00	34 – 3
5VV–H3311–00	31 – 2
	31 – 6
5VV–H3312–00	31 – 3
5TL–H3320–10	31 – 5
5VV–H3322–00	31 – 7
5TL–H3350–00	37 – 11
5MX–H3371–00	37 – 12
5TL–H3509–00	32 – 5
5TL–H3510–00	32 – 1
5TL–H3511–00	32 – 2
2GV–H3517–00	32 – 4
5TL–H353F–00	32 – 3
5TL–H3550–00	32 – 7
5TL–H3912–00	35 – 14
5TL–H3922–00	35 – 20
5TL–H3941–00	35 – 2
5TL–H3947–00	35 – 3
5TL–H3955–00	35 – 7
5TL–H3973–10	35 – 1
5TL–H3975–10	35 – 11
5TL–H397X–00	35 – 4
4US–H3980–00	35 – 23
5TL–H3980–00	35 – 17
5TL–H4140–10	31 – 4
5TL–H4150–10	31 – 8
5TL–H4310–10	33 – 1
5HV–H4314–00	33 – 2
5TL–H4340–00	33 – 3
5TL–H4374–00	33 – 4
3AY–H454E–00	28 – 11
5TL–H4710–00	34 – 1
4AC–H4714–00	34 – 2
5TL–H4721–00	34 – 5
5TL–H4723–00	34 – 7
5TL–H4735–00	34 – 6
5TL–H4743–00	34 – 4
5TL–H5540–00	37 – 1
5LL–H5546–00	37 – 2
5TL–H5752–00	37 – 15
4US–H5753–00	37 – 17
5ER–H5757–00	37 – 16
5TL–W0041–01	26 – 5
5TL–W0045–01	23 – 17
5TL–W0047–50	23 – 5
5TL–W0048–00	23 – 6
5TL–W0057–50	23 – 4
90101–06278	24 – 14
90105–08048	15 – 7
90105–08121	18 – 2
90105–10036	25 – 2
90105–10066	15 – 3
90109–063F1	16 – 7
90109–06577	35 – 21
90109–067E4	10 – 29
90109–06814	35 – 15
90109–08881	27 – 11
90110–06813	10 – 30
90111–08815	23 – 2
90116–08806	1 – 5
90119–05071	37 – 18
90119–06044	16 – 6
	21 – 6
	27 – 9
90119–06086	6 – 16
90119–06182	7 – 17
90119–06211	7 – 18
90149–06011	20 – 10
90153–06029	1 – 6
90159–06033	21 – 16
90159–06067	17 – 9
90159–06817	16 – 4
	28 – 6
90163–05801	17 – 6
90163–05803	7 – 14
90170–05302	3 – 10
90170–10317	13 – 7
90175–06013	25 – 23
90176–08026	1 – 17
90179–08577	9 – 12
90179–12248	29 – 6
90179–25033	19 – 25
90183–05807	16 – 8
	21 – 7
	25 – 6
	27 – 8
	34 – 9
90185–08055	27 – 12
90185–10808	25 – 3
90185–10811	22 – 9
90185–12061	15 – 13
90185–14814	24 – 15
90201–05016	9 – 5
90201–06057	6 – 26
90201–06060	13 – 2
90201–081R9	9 – 13
90201–08609	1 – 16
90201–086P8	9 – 17
90201–10018	12 – 7
90201–10118	26 – 3
90201–10119	27 – 3
90201–101J1	22 – 10
90201–106F2	18 – 5
90201–12172	10 – 35
90201–12190	18 – 4
90201–12688	15 – 12
	29 – 5
90201–14016	24 – 16
90201–15008	14 – 4
90201–15016	14 – 5
90201–154E8	12 – 13
90201–16008	13 – 16
90201–20276	24 – 17
90202–05193	20 – 11
90206–14093	24 – 13
90208–12050	13 – 21
90208–21002	14 – 8
90214–14002	13 – 19
90249–10002	27 – 2
90249–12008	25 – 24
90280–03017	2 – 11
90340–12808	10 – 34
90340–32805	11 – 3
90380–15800	12 – 12
90387–06052	6 – 24
90387–067V1	6 – 6
90387–06818	28 – 12
90387–06891	7 – 19
90387–07717	16 – 2
90387–08754	15 – 6
90387–10277	22 – 7
90387–16009	13 – 15
90401–10812	26 – 2
90430–06014	1 – 7
90430–08119	10 – 23
90445–08815	36 – 2
90445–08819	36 – 3
90462–10802	11 – 15
90464–60067	7 – 21
90465–06376	7 – 20
90465–10037	37 – 5
90467–08075	20 – 7
90467–09006	1 – 26
	20 – 6
90467–11106	10 – 7
	11 – 7
90467–12800	7 – 13
90480–13428	34 – 10
90480–14817	6 – 23
90501–16003	25 – 22
90501–16004	5 – 6
90506–12001	24 – 8
90506–15001	24 – 9
90506–20514	27 – 13
90506–35002	27 – 5
90508–32768	12 – 11
90560–10292	22 – 2
91317–06012	4 – 13
91317–06014	36 – 10
91317–06016	4 – 11
91317–06020	1 – 13
	29 – 3
	35 – 19
91317–06025	12 – 17
	26 – 11
91317–08035	9 – 16
92903–06200	9 – 4
92907–05600	11 – 20
	35 – 9
92907–06200	11 – 30
	11 – 33
	11 – 37
92907–06600	6 – 11
	6 – 15
	28 – 3
	36 – 11
	37 – 9
9290L–06200	35 – 6
93101–21803	13 – 11
93102–15801	12 – 15
93102–17803	13 – 6
93102–19800	10 – 13
93102–22810	10 – 19
93102–26800	14 – 10
93106–20816	22 – 3
93210–06800	13 – 9
93210–07802	24 – 6
93210–09800	1 – 4
93210–148H8	10 – 25
93210–15862	4 – 14
93210–25803	7 – 4
93210–29800	5 – 7
93210–328G3	11 – 4
93210–448G4	1 – 15
93210–71462	1 – 12
93211–07800	10 – 14
93300–638Y6	13 – 8
93306–002X2	4 – 2
93306–003X7	15 – 10
93306–004XD	14 – 9
93306–203YY	13 – 5
	14 – 12
93306–300X8	22 – 4
93306–301YS	14 – 2
93306–305X3	2 – 8
93306–372Y2	2 – 9
93306–809Y0	12 – 2
93310–528Y4	2 – 4
93311–315Y6	14 – 3
93410–20070	14 – 11
93440–45827	12 – 3
93450–16068	2 – 14
94107–14802	22 – 5
94108–14802	24 – 2
94207–14802	22 – 6

PART NO.	REF. NO.
94208–14802	24 – 3
94568–72090	4 – 6
94700–00828	1 – 18
95027–06010	13 – 3
95027–06012	6 – 18
	12 – 9
95027–06016	10 – 18
	11 – 28
	11 – 32
	11 – 36
95027–06025	11 – 12
95027–06035	11 – 13
95027–06050	10 – 11
	11 – 29
95027–06060	10 – 9
	11 – 14
95027–06070	10 – 17
95027–06100	1 – 22
	10 – 10
95307–10600	18 – 3
95307–12700	13 – 22
95607–06100	35 – 16
	35 – 22
95607–08200	15 – 8
95607–10200	9 – 10
9560L–10200	15 – 4
95707–06500	21 – 10
	21 – 13
95707–08500	9 – 7
95707–10500	24 – 5
95807–06010	15 – 15
	33 – 5
	37 – 13
95807–06012	19 – 30
	19 – 32
	20 – 3
95807–06014	16 – 3
95817–06065	7 – 5
95817–08016	4 – 5
	10 – 22
95817–08045	9 – 11
95817–10035	9 – 9
95827–06020	21 – 19
97007–05020	11 – 19
97507–06525	30 – 7
97707–50012	17 – 2
	17 – 8
	25 – 8
97707–50012	35 – 10
97707–50016	17 – 7
	25 – 7
	28 – 4
	28 – 7
	28 – 9
	31 – 9
	32 – 6
	35 – 12
97707–60430	6 – 13
97707–60530	6 – 12
9770L–40620	34 – 8
98502–04012	8 – 22
98507–05016	25 – 16
	35 – 8
98507–05020	5 – 3
98507–05025	25 – 27
98507–06014	25 – 21
98507–06016	29 – 4
	37 – 8
98507–06018	37 – 4
98507–06020	6 – 10
	6 – 25
98507–06025	6 – 14
	28 – 2
98507–06040	25 – 20
9850L–06008	35 – 5
9870M–03008	35 – 18
98907–06010	11 – 10
98907–06012	11 – 35
98980–06012	9 – 3
99001–08600	27 – 4
99009–15400	12 – 14
99009–17400	13 – 4
99480–05010	10 – 16
99530–10114	1 – 20
	1 – 21
	10 – 8
	10 – 28
	11 – 11